


# InRow® Direct Expansion Air Conditioners

## ACRD300 and ACCU30000 Series

### Operation and Maintenance

990-91192B-001

Release date: 05/2019

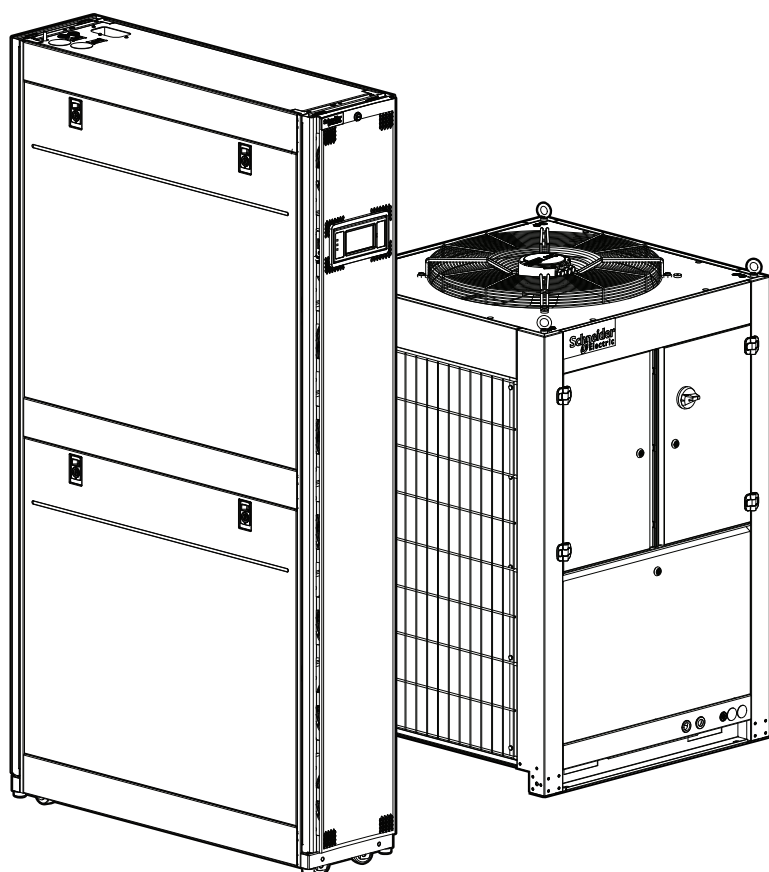

# Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

# Table of Contents

<b>Safety</b>	7
Important Safety Instructions — SAVE THESE INSTRUCTIONS	7
Safety During Operation	8
<b>General Information</b>	10
Overview	10
Original Instructions	10
Save These Instructions	10
Cross-Reference Symbol Used in This Manual	10
Manual Updates	10
Abbreviations	10
Radio Frequency Interference	11
California Proposition 65—Warning Statement for California Residents	11
<b>Commissioning</b>	12
Overview	12
Inspection Checklists	12
Initial Inspection Checklist	12
Electrical Inspection Checklist	13
Mechanical Inspection Checklist	14
Display Interface Inspection Checklist	15
Start-Up Inspection Checklist	15
Final Inspection Checklist	16
Charging the Equipment	17
Calculating R410A Refrigerant Charge	17
Refrigerant Charging Process	18
Oil Charging Procedure	19
<b>Overview</b>	21
InRow Advantages	21
<b>Operation</b>	22
Display Interface	22
Alarm LED	22
Status LED	23
Link-RX/TX (10/100) LED	23
Using the Display	24
Overview Screen	24
Home Screen/Main Menu	25
Display Controls	28
Using the Path Statement	28
Changing Settings	29
Logging In/Password Entry	30
Tests	31
Calibrating the Display	31
Testing Display LEDs and Annunciator	31
Testing the AFC LED	31
<b>Unit Start Up/Shut Down</b>	32
Start the Cooling Unit	32
Stop the Cooling Unit	32

General Configuration .....	33
Import and Export Unit Configuration .....	33
Export .....	33
Import .....	33
Cooling Unit Configuration .....	34
Configure the Unit .....	34
Cooling Group Configuration .....	36
Configure the Cooling Group .....	36
Configure Modbus .....	36
Interface Connection .....	37
A-Link Connections .....	38
Control the Environment .....	39
How the Modes of Operation Work .....	39
Setpoints .....	40
Active Flow Controller (AFC) Settings .....	41
Envelope Management .....	42
Run Hours and Service Intervals .....	44
Run Hours .....	44
Reset Run Hours .....	44
Service Intervals .....	44
User Security Settings .....	45
Add a New User or Edit an Existing User .....	45
Delete a User .....	45
Display Settings .....	45
Language, Date, Time, and Temperature .....	45
Screen Visibility and Audible Tones .....	46
Restore Defaults .....	46
Network Configuration .....	47
Configure the Network .....	47
TCP/IPv4 Settings .....	47
TCP/IPv6 Settings .....	47
Web Access Settings .....	47
FTP Server Settings .....	47
View Status Readings .....	48
Overview Screen .....	48
Cooling Unit Status .....	49
Cooling Group Status .....	50
Sensor Readings .....	50
Refrigerant System .....	51
Power Information .....	52
Input/Output States .....	52
About the Network .....	53
About the Unit .....	54
About the AFC .....	54
About the Display .....	54
Logs .....	55
Event Log .....	55
View Event Log .....	55
Filter Event Log .....	56
Clear Event Log .....	56

Data Log .....	57
Data Log Configuration .....	57
Export Data .....	58
<b>Alarms .....</b>	<b>59</b>
Respond to Alarms .....	59
View Active Alarms .....	59
Clear Active Alarms .....	59
Alarm Thresholds .....	59
Alarm Messages and Suggested Actions .....	60
<b>Network Management Card .....</b>	<b>66</b>
Quick Configuration .....	66
Overview .....	66
TCP/IP Configuration Methods .....	66
Device IP Configuration Wizard .....	67
.ini File Utility .....	67
BootP and DHCP Configuration .....	67
Remote Access to the Command Line Interface (CLI) .....	69
Local Access to the Command Line Interface (CLI) .....	70
Access a Configured Unit .....	71
Overview .....	71
Web Interface .....	71
Telnet and SSH .....	72
Simple Network Management Protocol (SNMP) .....	72
FTP/SCP .....	73
Modbus .....	73
Recover From a Lost Password .....	74
<b>Updating the Firmware .....</b>	<b>75</b>
Update Display Firmware .....	75
Display Interface .....	75
Using a USB Drive to Transfer and Update Files .....	76
Verify Updates .....	78
Verify Success of the Transfer .....	78
Last Transfer Result Codes .....	78
Verify Version Numbers of Installed Firmware .....	78
<b>Service Menu .....</b>	<b>79</b>
Service Menu Access .....	79
Unit Configuration .....	79
Containment Systems .....	80
Run Hours and Service Intervals .....	81
Compressor Settings .....	81
Oil Return Management .....	82
PID Settings .....	83
Tune the PID Loop .....	85
<b>Maintenance .....</b>	<b>87</b>
Maintenance Mode .....	87
Monthly Preventive Maintenance .....	89
Quarterly Preventive Maintenance .....	92
Semi-Annual Preventive Maintenance .....	94
<b>Troubleshooting .....</b>	<b>97</b>



# Safety

## Important Safety Instructions — SAVE THESE INSTRUCTIONS

Read these instructions carefully and look at the equipment to become familiar with it before trying to install, operate, service or maintain it. The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages with this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in death or serious injury**.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in death or serious injury**.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury**.

**Failure to follow these instructions can result in injury or equipment damage.**

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury. The safety alert symbol shall not be used with this type of safety message.

**Failure to follow these instructions can result in equipment damage.**

## Please Note

Electrical equipment should only be installed, operated, serviced, and maintained by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

## Safety During Operation

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

#### **HAZARD FROM MOVING PARTS**

Keep hands, clothing, and jewelry away from moving parts. Check the equipment for foreign objects before closing the doors and starting the equipment.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **WARNING**

#### **MOVING PARTS HAZARD**

Do not remove rear panels if the equipment is operating.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **WARNING**

#### **HAZARD OF EQUIPMENT FALLING OVER**

- Use two or more persons at all times to move or turn this equipment.
- Always push, pull, or turn while facing the front and rear of this equipment. Never push, pull, or turn while facing the sides of this equipment.
- Slowly move this equipment across uneven surfaces or door thresholds.
- Lower leveling feet to floor when this equipment is at rest.
- Lower leveling feet and attach joining brackets to adjacent racks when this equipment is in final position.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**



**⚠ CAUTION****HAZARD TO EQUIPMENT OR PERSONNEL**

Ensure that all spare parts and tools are removed from the equipment before operating.

**Failure to follow these instructions can result in injury or equipment damage.**

**⚠ CAUTION****HAZARD OF HIGH PRESSURE REFRIGERANT OR EQUIPMENT DAMAGE**

- Use R410A refrigerant only.
- Contents are under pressure: use caution when releasing pressure in the system or refilling.
- Charging and maintaining the refrigeration circuit must only be performed by qualified personnel.

**Failure to follow these instructions can result in injury or equipment damage.**

# General Information

## Overview

### Original Instructions

These are the original instructions provided by the manufacturer.

### Save These Instructions

This manual contains important instructions that must be followed during the installation of this equipment.

### Cross-Reference Symbol Used in This Manual



See another section of this document or another document for more information on this subject.

### Manual Updates

Schneider Electric™ policy is one of continuous technological innovation and the company reserves the right to amend any data herein without prior notice. The images shown in this manual are for descriptive purposes only and they may differ from specific models that are selected.

**NOTE:** Unit images and component identification information are examples only. The final configuration of the unit may change according to the different options.

Check for updates to this manual on the Schneider Electric Web site, [www.schneider-electric.com/support](http://www.schneider-electric.com/support). Select the **Download Documents and Software** link under the **Support** tab and enter the manual part number or SKU for your equipment in the search field. See the back cover of this manual for the part number.

### Abbreviations

The following are abbreviations and terms used in this manual:

- EEV: Electronic expansion valve
- VFD/VSD: Variable-frequency drive/variable-speed drive
- DX: Direct expansion
- BMS: Building management system
- ATS: Automatic transfer switch
- HACS: Hot aisle containment system
- CACS: Cold aisle containment system
- RACS: Rack aisle containment system


## Radio Frequency Interference

The SKUs ACRD301, ACRD301G, ACRD306, ACRD306G, ACRD307, ACRD307G, ACCU30001, ACCU30002, ACCU30101, and ACCU30102 comply with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. These devices may not cause harmful interference.
2. These devices must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## California Proposition 65—Warning Statement for California Residents

 **WARNING:** This product can expose you to chemicals including lead and lead compounds, that are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# Commissioning

After installation, verify that all components are working properly and the equipment is ready to begin operation.

## Overview

After installation, verify that all components are working properly and that the equipment is ready to begin operation.

1. Complete the following inspections:
- Initial

• Electrical

• Mechanical

• Display interface

• Start-up

• Final
2. Check the refrigerant charge in the system and add refrigerant if needed (see *Charging the Equipment*, page 17).
3. Charge the system with oil (see *Oil Charging Procedure*, page 19).

## Inspection Checklists

### Initial Inspection Checklist

⚠ **WARNING**

**DAMAGE TO EQUIPMENT AND PERSONNEL**  
Do not run service utilities in front of the fan outlet.  
**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The initial inspection ensures that the equipment has been properly installed. The location of the cooling unit has been properly prepared and the cooling unit is free of damage.

**NOTE:** The vapor barrier minimizes moisture infiltration. Without a vapor barrier, it will be difficult to maintain the humidity in the room. Do not introduce unconditioned outside air into the space.

Ensure that

- ☐

The installation procedure is complete according to the requirements of the installation manual and local codes.
- ☐

The walls, floor, and ceiling of the room where the cooling unit is located are sealed with a vapor barrier.
- ☐

There is no evidence of damage to the cooling unit.
- ☐

Clearance around the equipment is in accordance with CE, local, and national codes as well as the installation manual.
- ☐

The cooling unit is level and joined to the adjacent racks.
- ☐

The cooling unit is not installed at the open end of a row.

## Electrical Inspection Checklist

### **⚡⚡ DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **⚡⚡ WARNING**

#### **ELECTRICAL HAZARD**

- Electrical service must conform to local and national electrical codes and regulations.
- The equipment must be grounded.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The electrical inspection verifies that all electrical connections are secure and correct and that the equipment is properly grounded.

#### **Ensure that**

- ☐ Incoming voltages match the phase and voltage rating on the nameplate.
- ☐ Electrical wiring complies with local and national codes and regulations.
- ☐ Equipment is properly connected to an earth ground.
- ☐ Front and rear doors for the indoor unit and doors for the outdoor are properly grounded.
- ☐ Internal electrical components and terminal blocks do not have any loose connections.
- ☐ Electrical connections are tight, including contactors, terminal blocks, controllers, switches, relays, auxiliary devices, and field connections.
- ☐ The primary and secondary power feeds (if applicable) are properly connected.
- ☐ Circuit breakers are correct and securely attached to the DIN rail.
- ☐ The rack temperature sensors are installed correctly for InRow and CACS modes.
- ☐ The optional rope water detection device is installed properly.
- ☐ The temperature and humidity sensors are connected correctly.



See the *Installation Manual* for the unit for installation procedures.

## Mechanical Inspection Checklist

### **⚠ CAUTION**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

- The equipment is shipped from the factory with a nitrogen holding charge. Remove the nitrogen holding charge using the service ports located on the internal refrigerant piping.
- Improperly installed piping may result in improper operation and possible damage to the cooling unit or surrounding equipment.

**Failure to follow these instructions can result in injury or equipment damage.**

The mechanical inspection verifies that all mechanical components and connections are secure and tight and ready for start-up. The inspection ensures that field piping is properly installed to promote oil return to the compressor.

#### **Ensure that**

- ☐ The condensate drain line is the size of the drain connection and has proper slope away from the unit.
  - ☐ Mechanical connections are tight, including refrigerant piping and the condensate drain line.
  - ☐ Refrigerant piping size is correct according to the line size table in the installation manual.
  - ☐ Vertical, horizontal, and total run lengths are recorded for liquid and gas lines.
  - ☐ Field-installed traps and piping are in accordance with the installation manual and follow proper piping practices.
  - ☐ The number of 45- and 90-degree bends in the refrigerant piping are recorded.
  - ☐ Room conditions comply with the operating guidelines before starting the equipment.
  - ☐ Covers and guards are in place.
  - ☐ Piping is adequately supported and isolated when necessary.
  - ☐ Piping in the building and on the roof is properly insulated.
  - ☐ Piping has been leak tested and held a vacuum prior to introduction to refrigerant into the system.
- Indoor units: Check that the indicator paper in the sight glass is a green color.
- ☐ Field-installed service valves are open.

## Display Interface Inspection Checklist

The display interface inspection verifies that the sensors and internal communication links are installed properly. Check that the cooling unit is connected to the other cooling units in the room if you are using cooling group controls.

---

### Ensure that

- ☐ An A-Link bus is connected to each cooling unit and a terminator is plugged into all unused A-Link connections.
- ☐ The input contacts and output relays are connected correctly.
- ☐ The building management system is connected correctly and a terminator is wired into the final cooling unit between Modbus D0 and Modbus D1.
- ☐ The network port is connected correctly and an IP address has been assigned to the equipment.

## Start-Up Inspection Checklist

The start-up inspection ensures that the equipment is operating properly after the initial start-up. This inspection verifies that all modes of operation are working correctly and that the cooling unit is ready for normal operation.

---

### While the equipment is operating, ensure that

- ☐ The cooling unit is free from malfunctions, including water leaks, unusual vibrations, or other irregularities in each mode of operation.
- ☐ Air filters are clean and free of debris. Replace air filters if necessary.
- ☐ If applicable, perform an air balance to verify that the fans are set to the desired fan speed.
- ☐ If equipped, the condensate pump is working properly by adding fresh clean water to the condensate pan and checking pump operation.
- ☐ Temperature and humidity sensors are working properly.
- ☐ Compressor suction and discharge pressures are within normal range.
- ☐ The compressor oil level is at least 1/3 full.
- ☐ The cooling unit has the proper refrigerant charge for year-round operation.
- ☐ The high-pressure switch is operating correctly.
  1. Shut down the condenser fan.
  2. The head-pressure will rise until the high-pressure switch shuts down the compressor.
  3. Record the shut-off point.

## Final Inspection Checklist

The final inspection verifies that the system is clean, the installed options work properly, and the start-up form is sent to Schneider Electric.

---

### Ensure that

- ☐ Interior and exterior of the equipment are clean and free from debris and loose hardware.
- ☐ Internal protective covers and hardware are installed.
- ☐ Packaging materials are disposed of properly.
- ☐ There are no active alarms.
- ☐ Customer is trained on the user display and is able to view active alarms and status readings.
- ☐ The customer is given the technical support contact number applicable for their region.
- ☐ Unit documentation has been given to the customer.
- ☐ Start-up form is filled in and sent to Schneider Electric.



## Charging the Equipment

### **⚠ WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **⚠ CAUTION**

#### **HAZARD OF HIGH PRESSURE REFRIGERANT OR EQUIPMENT DAMAGE**

- Use R410A refrigerant only.
- Use hose and manifold set suitable for R410A with a minimum pressure rating of 50 bar (725 PSIG).
- The unit display should be used to obtain pressure readings.

**Failure to follow these instructions can result in injury or equipment damage.**

## Calculating R410A Refrigerant Charge

The nominal equipment charge for standard units is 15 kg (33.1 lb) with a standard piping connection of 7.5 m (24.6 ft). The nominal equipment charge for low temperature units is 19.5 kg (43.0 lb) with a standard piping connection of 7.5 m (24.6 ft). If the piping length is longer than 7.5 m (24.6 ft), the refrigerant charge must be calculated and added to the overall system charge. The following table provides a reference for the added charge if the piping length is longer than 7.5 m (24.6 ft):

U.S. Nominal Pipe Size – in.	Type	Outside Diameter – in.	Wall Thickness – mm	Cross-Section – mm <sup>2</sup>	Refrigerant Charge – kg/m (lb/ft)
3/8	L	1/2	0.89	94	0.094 (0.063)
1/2	L	5/8	1.02	150	0.151 (0.101)
5/8	L	3/4	1.07	224	0.226 (0.151)
3/4	L	7/8	1.14	312	0.314 (0.211)

## Refrigerant Charging Process

R410A is a mixed refrigerant. When charging this equipment with mixed refrigerant, only liquid refrigerant must be used.

**NOTE:** The equipment must be charged only with R410A refrigerant. The installing contractor is responsible for providing sufficient refrigerant for a complete system charge during start-up.



See *Component Identification* section in the *Installation Manual* for the location of service ports.

1. Pressurize the system to 17.2 bar (250 PSI) with nitrogen (use the service and discharge ports). Leave the system pressurized for 24 hours then check the gauges for a drop in pressure.
2. Use a vacuum pump and pull the first vacuum down to 750 microns (use the vacuum ports on the connection piping). The initial pull-down can take up to 24 hours.
3. Once the vacuum level has reached 750 microns, close the manifold gauge valves and turn off the vacuum pump. Wait for one hour (the vacuum should not rise above 1500 microns) and then break the vacuum with nitrogen gas (use the service and discharge ports) until the system pressure equals atmospheric pressure.
4. Pull a final vacuum down to 300 microns for a minimum of two hours.
5. Charge with liquid R410A refrigerant through the service port and needle valve on the condenser until the pressure equalizes with the refrigerant canister.
6. Open the ball valves and start the system. Charge the refrigerant slowly through the suction.

## Oil Charging Procedure

### **⚠ WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

### **NOTICE**

#### **DAMAGE TO EQUIPMENT**


Do not charge the compressor with too much oil: compressor damage could result. The only way to drain oil from the compressor is to remove the compressor from the equipment. The following system damage could also occur:

- Failure of valves and pistons due to oil slugging.
- Excessive oil carryover.
- Loss of evaporator performance due to oil level build-up in the low-pressure side of the system.

**Failure to follow these instructions can result in equipment damage.**

The system must be field-charged with 600 ml (20 oz) of PVE oil to make sure the system functions normally.

In installations with good oil return and line runs up to 15 m (49 ft), no additional oil above the initial 600 ml (20 oz) of oil is required. If the installation lines exceed 15 m (49 ft), additional oil may be needed. 1% or 2% of the total system refrigerant charge can be used to calculate the required oil. Regardless, the oil charge has to be adjusted based on the oil level in the compressor sight glass: the oil level must be no lower than 1/3 in the sight glass when the compressor is running.

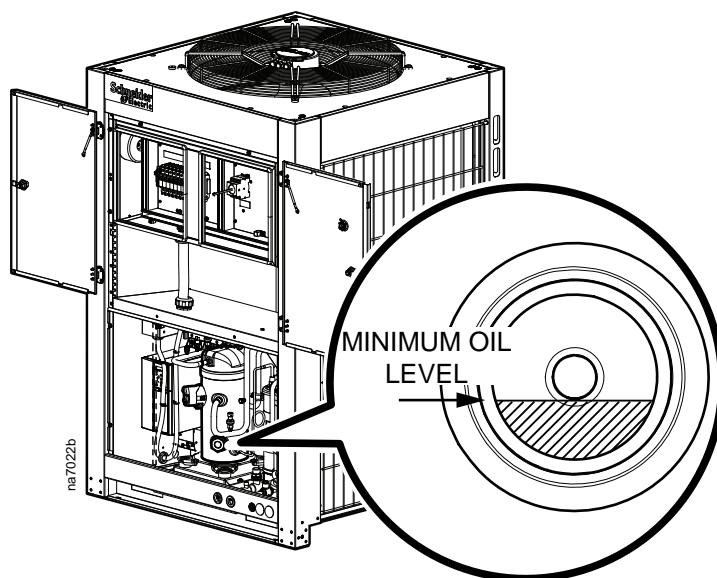

1. Prepare to add oil:
  - a. Use a new sealed oil can and a manual oil pump. The pump hose must be sized for 1/4 in. flare fittings and must include a valve depressor at its end, which will open the valve on the suction port of the compressor.
  - b. Use Daphne Hermetic PVE Oil FVC32D. Any other oil must be approved by Schneider Electric before using.
2. Purge the pump and hose

- a. Ensure that the oil pump is clean. Insert the pump in the oil container and make sure that the container is open to the atmosphere for as short a period of time as possible. When available, use a plug adapter kit to further reduce the exposure of the oil to the atmosphere.
  - b. Bleed all air from the pump and hose with a few strokes of the pump. Purging the pump removes the moisture-saturated oil left inside the hose from previous usage.
  - c. Connect the hose to the suction port of the compressor immediately after purging to avoid moisture contamination.
3. While the equipment is running, charge 600 ml (60 oz) PVE oil through the suction port. Pump the oil very slowly. (This is to ensure the oil separator is functioning properly.)
4. Other than the amount required for the oil separator, no additional oil should be required. Let the compressor run at full capacity for at least one hour and check the oil level in the oil sight glass. The level should be between 1/3 and 2/3 full, or within the limit shown on the oil level sticker. If the oil is not within the acceptable limit, check the oil return line for restrictions. When oil is flowing properly, the oil return line should feel warm to the touch.

**NOTE:** Dispose of the oil waste appropriately.

## Overview


The ACRD300 series of indoor units can provide a cooling capacity up to 30 kW based on a half-rack platform (300 mm (12 in.)) with an ACCU30000 series outdoor condensing unit. A variable-speed compressor works with EC fans and a fin-tube exchanger to reach the best cooling efficiency. This modular, row-based computer room cooling system offers efficient, predictable, and economical cooling for a variety of spaces.

Critical environmental requirements now reach far beyond the confines of the traditional data center or computer room to encompass a larger suite of applications, referred to as technology rooms. Critical environment applications include the following:

- Computer rooms
- Telecommunication facilities
- Clean rooms
- Power equipment
- Medical equipment rooms
- LAN/WAN environments


## InRow Advantages

The row-based solution improves energy efficiency and cooling ability in a number of ways. First, the InRow DX unit draws air directly from the hot aisle, allowing the InRow DX unit to take advantage of higher heat transfer efficiency due to higher temperature differences. It can then discharge room-temperature air directly in front of the servers it is cooling. Placing the unit in the row enables the unit to operate at higher return and supply air temperatures, yielding 100% sensible capacity. This significantly reduces the need for humidification.

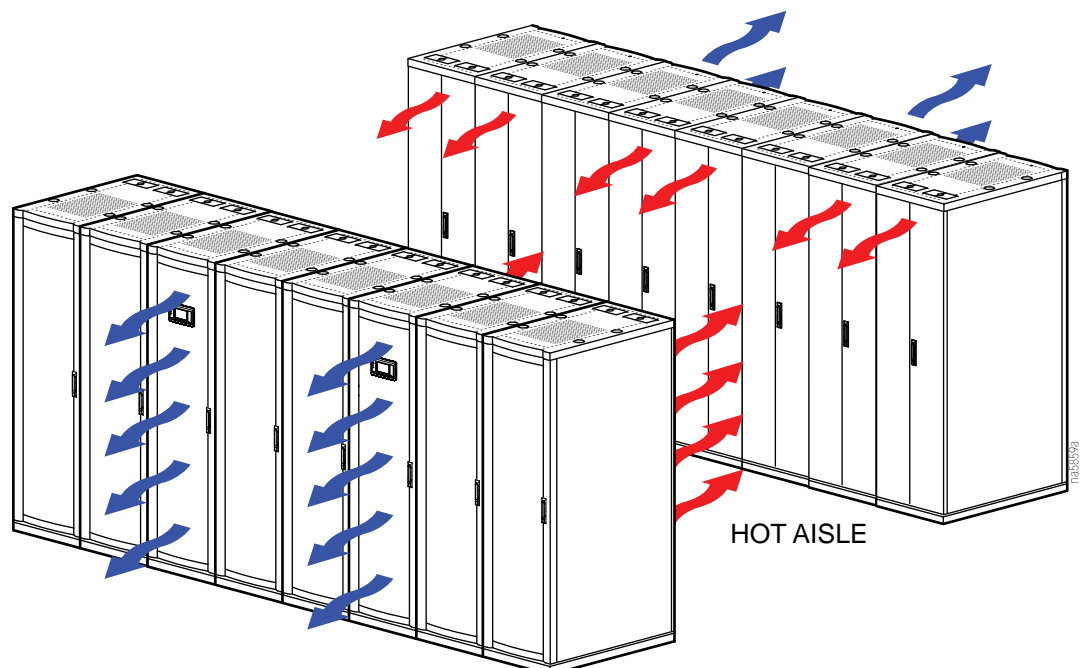

# Operation

## Display Interface

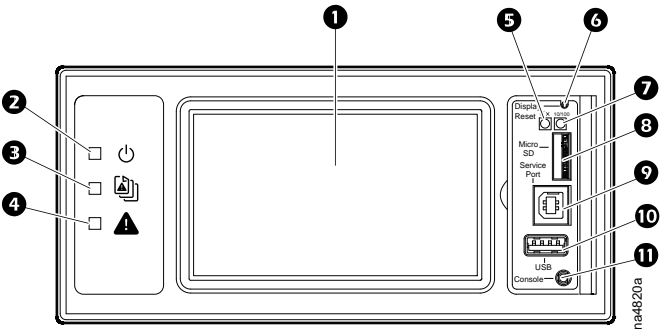

Item	Description	Function
❶	LCD Display	4.3-inch touch-screen color display
❷	Power LED	The cooling unit is powered when the LED is illuminated. Unit firmware is updating when LED is blinking.
❸	Check Log LED	When this LED is illuminated, a new entry has been made to the event log.
❹	Alarm LED	Displays current alarm condition of unit.
❺	Status LED	Displays current network management card status.
❻	Display Reset button	Resets the display microprocessor. This has no effect on the air conditioner controller.
❼	Link-RX/TX (10/100) LED	Displays current network link status.
❽	Micro SD card slot	Memory card expansion slot.
❾	Service port	USB-B port used only by service personnel.
❿	USB-A port	Supports firmware upgrades.
⓫	Serial Configuration port	Connects the display to a local computer to configure initial network settings or access the command line interface (CLI).

## Alarm LED

This LED indicates active alarms on the display.

Condition	Description
Off	No alarm
Solid yellow	Warning alarm
Solid red	Critical alarm

## Status LED

This LED indicates the status of the display.

Condition	Description
Off	One of the following situations exist: <ul style="list-style-type: none"><li>• The display is not receiving input power.</li><li>• The display is not operating properly. It may need to be repaired or replaced. Contact Schneider Electric Customer Support.</li></ul>
Solid green	The display has valid TCP/IP settings.
Solid orange	A hardware malfunction has been detected in the display. Contact Schneider Electric Customer Support.
Flashing green	The display does not have valid TCP/IP settings.
Flashing orange	The display is making BOOTP requests.
Alternately flashing green and orange	If the LED is flashing slowly, the display is making DHCP requests. If the LED is flashing rapidly, the display is starting up.

## Link-RX/TX (10/100) LED

This LED indicates the network status of the display.

Condition	Description
Off	One or more of the following situations exist: <ul style="list-style-type: none"><li>• The display is not receiving input power.</li><li>• The cable or device that connects the cooling unit to the network is disconnected or not functioning properly.</li><li>• The display itself is not operating properly. It may need to be repaired or replaced. Contact Schneider Electric Customer Support.</li></ul>
Solid green	The display is connected to a network operating at 10 megabits per second (Mbps).
Solid orange	The display is connected to a network operating at 100 Mbps.
Flashing green	The display is receiving or transmitting at 10 Mbps.
Flashing orange	The display is receiving data packets at 100 Mbps.

## Using the Display


The display initializes and runs an LED test when power is applied to the cooling unit.

### Overview Screen

After start-up, the display shows an overview screen containing basic status information. Press **Home** to toggle between the main menu and overview screen. After a period of inactivity, the display reverts back to the overview screen.

**NOTE:** To maintain cleanliness and optimal performance of the touch-screen surface, it is recommended to use a soft-tip stylus when using the display. Never use sharp or hard-pointed objects on the touch-screen surface.

**NOTE:** Images are examples only to show operation of the display interface. Screens on your unit may vary.

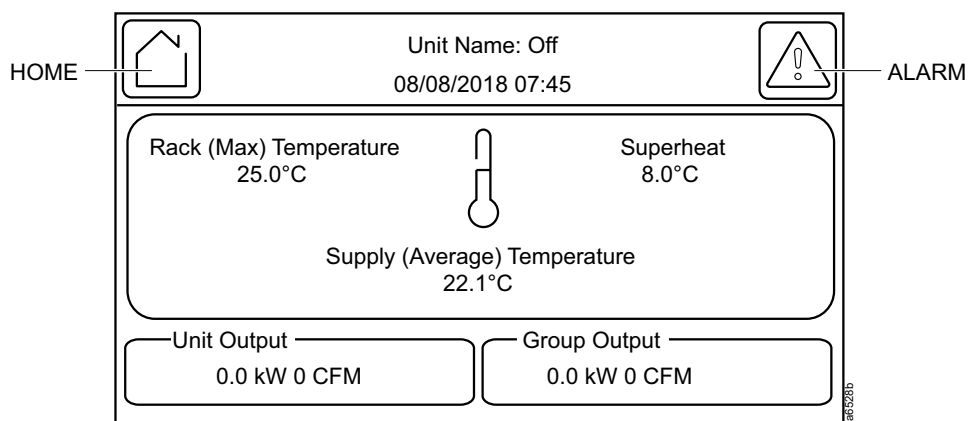







## Home Screen/Main Menu

At any time during operation, press **Home** to return to the main menu. While on the main menu, press **Home** to toggle between the home and overview screen. To view active alarms, press **Alarms**.




See *Alarms*, page 59 for more information.

The **Alarms** button changes based on the current state of the unit.

Symbol	Description
	No alarms: No alarms are present.
	Informational: Provides details on an alarms that are not a warning or critical.
	Warning: An alarm condition requires attention and could jeopardize your data or equipment if its cause is not addressed.
	Critical: A critical alarm exists, which requires immediate action.

Main menu options appear on the display as shown in the example below.

**NOTE:** Menus will vary depending on unit type.

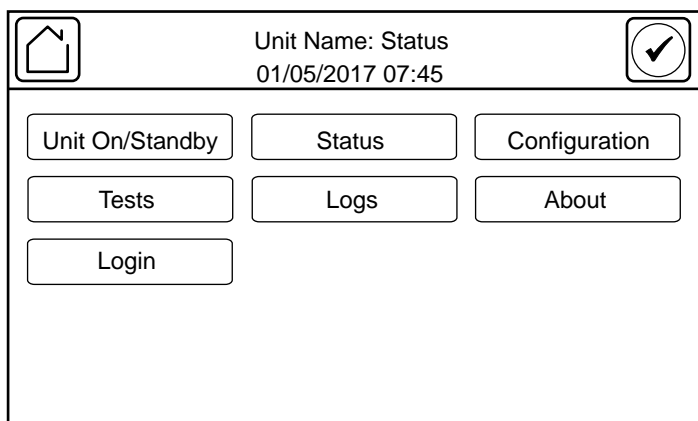

na6255b

## Menu Description

- **ON/Off:** The **On/Off** screen is used to turn the unit on or off and configure operational settings for the unit.



See *Unit Start Up/Shut Down*, page 32.

- **Status:** Contains menus with sensor reading information, unit operation information, runtimes and counters, and component information.



See *View Status Readings*, page 48.

- **Configuration:** Contains menus for user-configurable settings for the unit and network. The **Service** menu is also located here.
  - **Unit:** Contains menus for configuring the operational behavior of the cooling unit.



See *Cooling Unit Configuration*, page 34.

- **Group:** Contains menus for configuring the operational behavior of the cooling group.



See *Cooling Group Configuration*, page 36.

- **Containment Systems:** Contains settings related to the AFC.



See *Active Flow Controller (AFC) Settings*, page 41.

- **Service:** Contains menus for configuring the unit and manually controlling components for servicing. This menu is to only be accessed by qualified service personnel.



See *Service Menu*, page 79.

- **Display:** Contains menus for display settings, user preferences, and user access.



See *Display Settings*, page 45.

- **Network:** Contains menus for configuring the network settings.



See *Configure the Network*, page 47.

- **Modbus:** Contains settings to configure Modbus TCP settings.



See *Configure Modbus*, page 36.

- **Restore Defaults:** Contains options to restart the display.



See *Restore Defaults*, page 46.

- **Tests:** Contains menus to calibrate the touch screen and test the display LEDs.



See *Tests*, page 31.

- **Logs:** These screens save status information and record events and configuration changes.



See *Logs*, page 55.

- **About:** These screens display identifying information that is helpful when obtaining service.



See *About the Network*, page 53, *About the Unit*, page 54, and *About the Display*, page 54

- **Login/Logout:** Used to log into or log out of the unit.



See *Logging In/Password Entry*, page 30.


## Display Controls

To view a sub-menu, select an option from the main menu. Continue this process until the appropriate menu is active.

During navigation, the current file path is displayed at the top of the screen. Clicking on any of the headers reverts the display to the specified menu.

Menus with multiple pages use arrows to move between pages. **Forward** and **Back** advance one page at a time while **First** and **Last** move directly to the first or last page within the menu. Once changes have been made within a menu, press **OK** to confirm changes or **ESC** to cancel.

**NOTE:** Images are examples only to show operation of the display interface. Screens on your unit may vary.

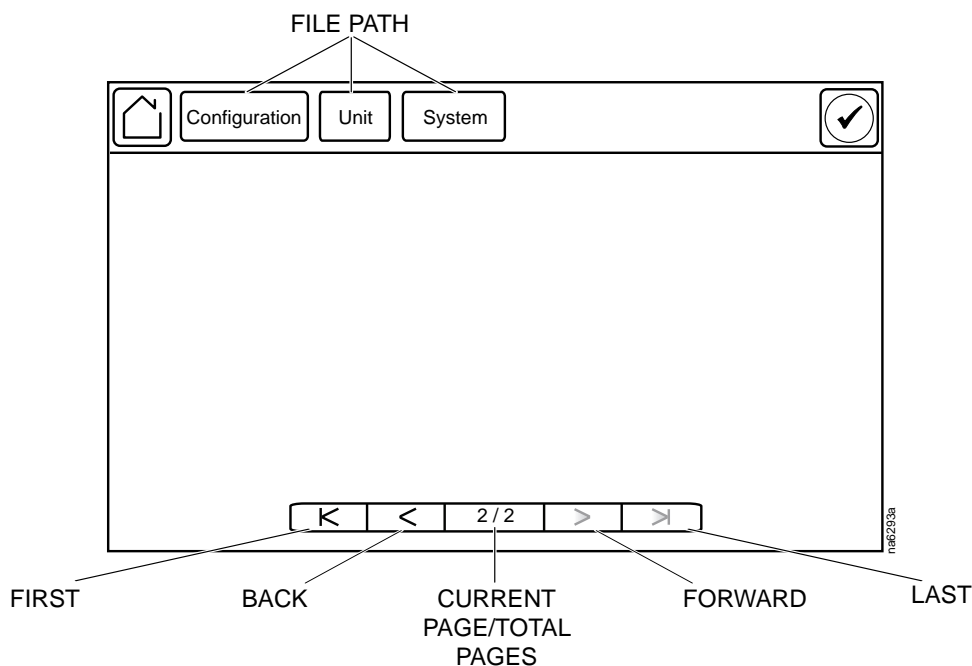

## Using the Path Statement

Select the main- and sub-menu options specified in the path statement to view or configure a setting. The path statement lists the main- and sub-menu options you select to navigate to the setting you want to view or modify. The parts of the path statement are defined in the following example:

**Path: Main > Status > Unit Overview**

**Main >** Your starting point is the main menu.

**Status >** Select this option from the main menu.

**Unit Overview >** Select this option from the sub-menu.


Subsequent options are listed and defined under the path statement.

## Changing Settings

**NOTE:** Images are examples only to show operation of the display interface. Screens on your unit may vary.


Screens that have mixed types of settings (e.g., list items and field items) require changes to be confirmed individually after being changed.

1. Select the option or enter a value for the setting to be changed.
  - a. For list items ❶, press the up and down arrows to select the setting.
  - b. For field items ❸, enter a value for the setting.
2. Press **OK** ❷ to confirm after each individual setting change.

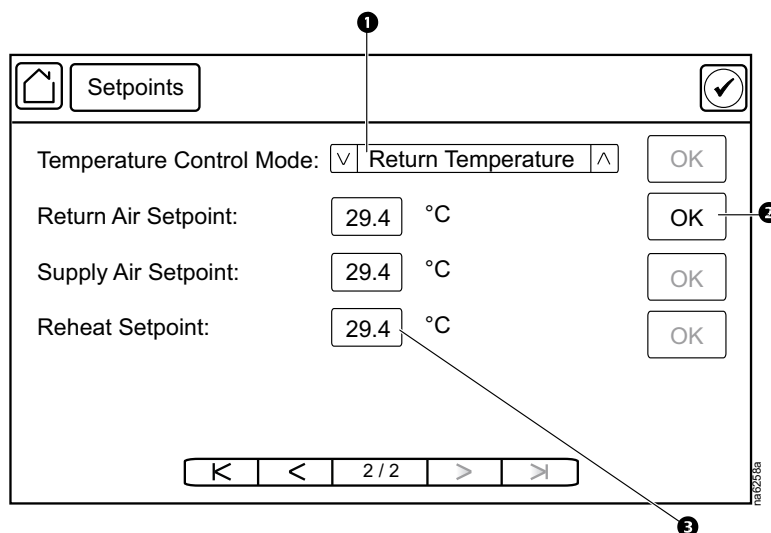

Screens that only contain field items can be confirmed together with a single **OK** button.

1. Enter a value for any or all field items ❶.
2. Press **OK** ❷ to confirm all changes at once, or press **ESC** to exit without accepting changes ❸.

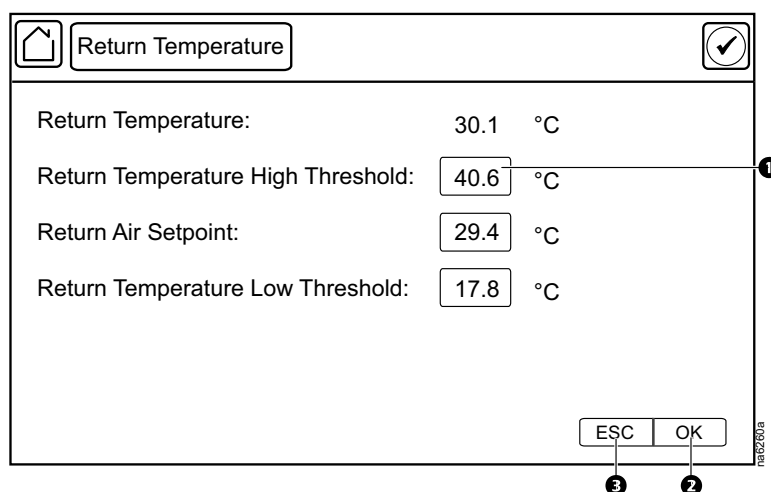

Logging In/Password Entry

Path: Main > Login

The unit display interface requires password verification before settings can be altered on the unit. You can log in from the main menu by selecting **Login**. While it is not required to log in to view unit configurations, it is required to make any changes.

1. Select **Login**.


2. Select your login ID with the up and down arrows ❶.

NOTE: The default user ID is apc.

3. Enter your password in the **Pin** field ❷ with the keypad.

NOTE: The default password is 1234.

4. Select **Enter** ❸.

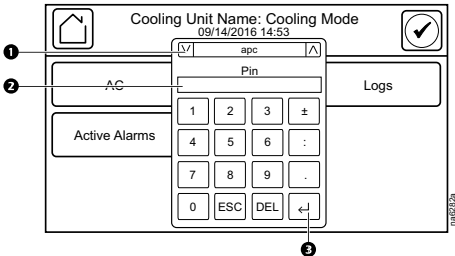

If the password was not entered from the **Login** screen on the main menu, you will be prompted to enter the password when attempting to change a setting. The unit default password is 1234.



See *Add a New User or Edit an Existing User*, page 45 for information on editing users and passwords.

The **Home** button visually changes to signify that a user is currently logged in.

Symbol	Description
	<b>Home</b> when the system is locked.
	<b>Home</b> when the system has been unlocked by a user.

After the password is entered, user login remains active until the period of inactivity exceeds the **Auto Logoff** setting.



See *Screen Visibility and Audible Tones*, page 46.

## Tests

### Calibrating the Display

**Path: Main > Tests > Display Calibration > Calibrate**

Use this screen to calibrate the touch screen by touching the center of the box that appears on the screen. When you are satisfied with the calibration, let the timer run down to zero.

**NOTE:** The touch screen will need to be calibrated every time the firmware on the touch screen is updated.

**Path: Main > Tests > Display Calibration > Calibration Check**

Use this screen to test the accuracy of the touch screen calibration by touching the center of the box that appears on the screen. When you are satisfied with the test, let the timer run down to zero.

### Testing Display LEDs and Annunciator

**Path: Main > Tests > Annunciators**

1. Press **Start** to test the display LEDs and annunciator.

The display LEDs will cycle through a green, orange, and red illumination pattern and the annunciator will sound.

2. Press **Stop** to stop testing.

### Testing the AFC LED

**Path: Main > Configuration > Service > Containment Systems**

1. Select **On** for **Active Flow Control Lamp Test** and press **OK** to test the Active Flow Controller (AFC) LED.

The AFC LED will cycle through a red, green, and blue illumination pattern.

2. Select **Off** for **Active Flow Control Lamp Test** and press **OK** to stop the LED test.

# Unit Start Up/Shut Down

## Start the Cooling Unit

**Path: Main > On/Off**

1. Select **On** for **Unit**.

If you are not logged in and **Protect On/Standby** is activated, a prompt will appear to enter your password.

**NOTE: Protect On/Standby** can be enabled under **Main > On/Off**. The default setting is **Disable**.

2. Enter your password if required.

The header will now display **Unit Name: Active**.

3. Select the option for **Unit Role Override**:

- **Automatic**: Allows the system to select the role of the cooling unit.
- **Forced On**: Select **Enable** if **Runtime Balancing Enable** is selected and you DO NOT want a particular unit in the group to become a backup unit.

The cooling unit will run according to the configured settings.

**NOTE:** The **Unit** setting only affects the local cooling unit. You must set the **Unit** option for each cooling unit in the cooling group.

**NOTE:** The **Standby Input** must also be inactive in order to leave the Standby state.

If the **Protect On/Standby** option has been selected, you will be prompted to enter the device password before a change can be made to the **Unit** setting.

## Stop the Cooling Unit

### DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The **Off** option does not remove power from the cooling unit. You must disconnect power at the mains to remove power from the cooling unit.

**Failure to follow these instructions will result in death or serious injury.**

**Path: Main > On/Off**

1. Select **Off** for **On/Off**.

If you are not logged in, a prompt will appear to enter your password.

The header will now display **Unit Name: Off**.

**NOTE:** The unit can also be stopped via an external signal connected to the **Remote On/Off**.



# General Configuration

## Import and Export Unit Configuration

It is possible to configure a cooling unit by importing the settings of another cooling unit from a USB drive.

### Export

1. Navigate to **Main > Configuration > Service > USB**.
2. Insert the USB drive into the USB port on the display.
3. Press **Export**.

The configuration of the unit will be exported to the USB drive.

A message stating "Abort export of data to USB drive" will disappear when exporting is complete.

4. Remove the USB drive from the USB port.

### Import

1. Navigate to **Main > Configuration > Service > USB**.
2. Insert the USB drive into the USB port on the display.
3. Press **Import**.

The configuration of the unit will be downloaded from the USB drive.

4. Press **OK** when the "Import Complete" message appears.
5. Remove the USB drive from the USB port.

## Cooling Unit Configuration

The cooling unit configuration options are set during the commissioning of the cooling units in the cooling group.

**NOTE:** Changing the settings incorrectly can cause malfunctions to your cooling unit. Only qualified service personnel should make changes to these settings.

**NOTE:** Displayed settings may vary based on model.

### Configure the Unit

#### Operation Settings

##### Path: Main > On/Off

Settings in the **On/Off** menu control how the cooling unit will operate.

**NOTE:** Changing the settings incorrectly can cause malfunctions to your cooling unit. Only qualified service personnel should make changes to these settings.

**NOTE:** Displayed settings may vary based on model.

- **Unit:** Select whether the unit is **Off** or **On**.
- **Startup Delay:** Enter a value for the start-up in seconds. The startup delay begins when power is applied to the cooling unit. The cooling unit cannot begin operation until this delay expires. Use the startup delay to restart equipment sequentially in your room after a scheduled downtime or a power outage. (0–999 s)
- **Cooling Strategy:** Select the cooling strategy used to control the operation of the unit. (**RACS, HACS, INROW, CACS, Manual**)



See the *How the Modes of Operation Work*, page 39 for more information on the types of cooling strategy.

- **Supply Air Setpoint:** The **Supply Air Setpoint** is the required temperature of the air expelled into the surrounding environment. (15.0–30.2°C (59.0–86.4°F))
- **Cool Setpoint:** Set the temperature that the cooling group should maintain in the IT space. (17.8–35.0°C (64.0–95.0°F))
- **Delta-T Setpoint:** When the group is programmed for HACS or RACS mode, this value specifies the desired temperature difference between the supply and return air temperatures when an AFC is not present. (**10F/5.6C, 15F/8.3C, 20F/11.1C, 25F/13.9C, 30F/16.7C, 35F/19.4C, 40F/22.2C**)

**NOTE:** Set a lower **Cool Setpoint** or a smaller **Delta-T Setpoint** to assist with start-up during winter.

- **Maximum Fan Speed:** Set the maximum fan speed percentage allowed for the evaporator fans. (15.0–100.0%)
- **Manual IT Fan Speed:** Enter a fan speed percentage to manually control the fans in the unit. (15–100%)

**NOTE:** The fan speed cannot exceed the **Maximum Fan Speed**.

- **Unit Role Override:** Determines the role of the cooling unit in the group.
  - **Automatic:** Allows the system to select the role of the cooling unit.
  - **Forced On:** Select **Forced On** if you have **Runtime Balancing Enable** selected and you DO NOT want a particular unit in the group to become a backup unit.

**NOTE:** **Runtime Balancing Enable** can be changed on the **Main > Configuration > Group > Cooling** screen.

- **Idle on Leak Detect:** When set to **Yes**, the cooling unit will enter idle mode if a **Leak Detected Critical** alarm activates. Set to **No** to disable the cooling unit from entering idle mode if a leak is detected.
- **Shutdown Input State:** Displays the current state of the shutdown input.
- **Shutdown Input Present:** Select whether a shutdown input is present in the unit.

**NOTE:** Same setting as on **Main > Configuration > Unit > Components**.

- **Shutdown Input Normal State:** Select the normal state of the shutdown input. (**Open**, **Closed**)

**NOTE:** Same setting as on **Main > Configuration > Unit > Components**.

- **Protect On/Standby:** Select **Enable** to password protect the **Main > On/Off** menu.

## Component Configuration

**Path:** Main > Configuration > Unit > Components

**NOTE:** Changing the settings incorrectly can cause malfunctions to your cooling unit. Only qualified service personnel should make changes to these settings. Displayed settings may vary based on model.

- **Voltage:** Displays the voltage of the unit. (**Not Configured**, **100-120v**, **200-240v**)

**NOTE:** This is a read-only value.

- **Power Source:** Displays whether the **Primary** or **Secondary** power supply is the current input power source for the unit.

**NOTE:** This is a read-only value.

- **Number of Evaporator Fan Power Supplies:** Set the number of fan power supplies installed in the electrical box. (1 or 2)
- **Condensate Pump Hold Time:** Set the length of time that the pump will continue to run after the lower condensate float switch is activated. (0–120 s)
- **Air Filter Type:** Select whether the air filters are **Standard** or **High Efficiency**.
- **Number of Rack Inlet Temp Sensors in Unit:** Set the number of rack inlet air temperature sensors connected to the unit. (0–4)
- **Number of Leak Detectors in Unit:** Set the number of leak sensors connected to the unit. (0–4)
- **Shutdown Input State:** Displays the current state of the shutdown input.
- **Shutdown Input Present:** Select whether a shutdown input is present in the unit.
- **Shutdown Input Normal State:** Select the normal state of the shutdown input. (**Open**, **Closed**)

## Cooling Group Configuration

The cooling group configuration settings determine which components are available and how the cooling group should operate.

**NOTE:** Changing the settings incorrectly can cause malfunctions to your cooling unit. Only qualified service personnel should make changes to these settings.

**NOTE:** Displayed settings may vary based on model.

### Configure the Cooling Group

**Path: Main > Configuration > Group > Composition**

The **Composition** menu contains settings that identify the number of cooling units installed in this cooling group and the physical arrangement of those cooling units.

- **Number of Units in Group:** The number of cooling units in this cooling group. Up to 20 cooling units can be joined together to work as a single cooling group.
- **Number of AFC Controllers:** The number of AFC units in the group (0–5).
- **Number of Backup Units:** The total number of desired backup cooling units. This value can range from zero to one less than **Number of Units in Group**.
- **Altitude:** The distance of the unit above sea level in meters or feet depending on the user preferences. The altitude is used to calculate the pressure compensation if an AFC is installed. The altitude is also used in conversions between absolute (g/Kg) and relative (%RH) humidity.

### Configure Modbus

Use the **Modbus TCP** menu to set up communications between the cooling unit and the building management system. Select to enable TCP communication protocol.

**Path: Main > Configuration > Modbus > Serial**


- **Enable Serial Modbus:** Select to enable Modbus serial communication protocol.
- **Address:** Each Modbus device must have a unique target identification number. Enter a unique number for this cooling unit. (1–247)
- **Baud Rate:** Set to either 9600 bps or 19200 bps.
- **Parity:** Select **Even**, **Odd**, or **None**.

**NOTE:** If you select **Even** or **Odd** parity, then select 1 stop bit on the host computer. If you select **None**, then select two stop bits on the host computer.

**Path: Main > Configuration > Modbus > TCP**

- **Enable Modbus TCP:** Select to enable Modbus TCP.
- **Port:** Enter a port. The default port is 502. For additional security enter a port between 5000 and 32768 (TCP connection only).
- **Restore Port to Default:** Press to restore the **Port** to default settings (502).

## Interface Connection

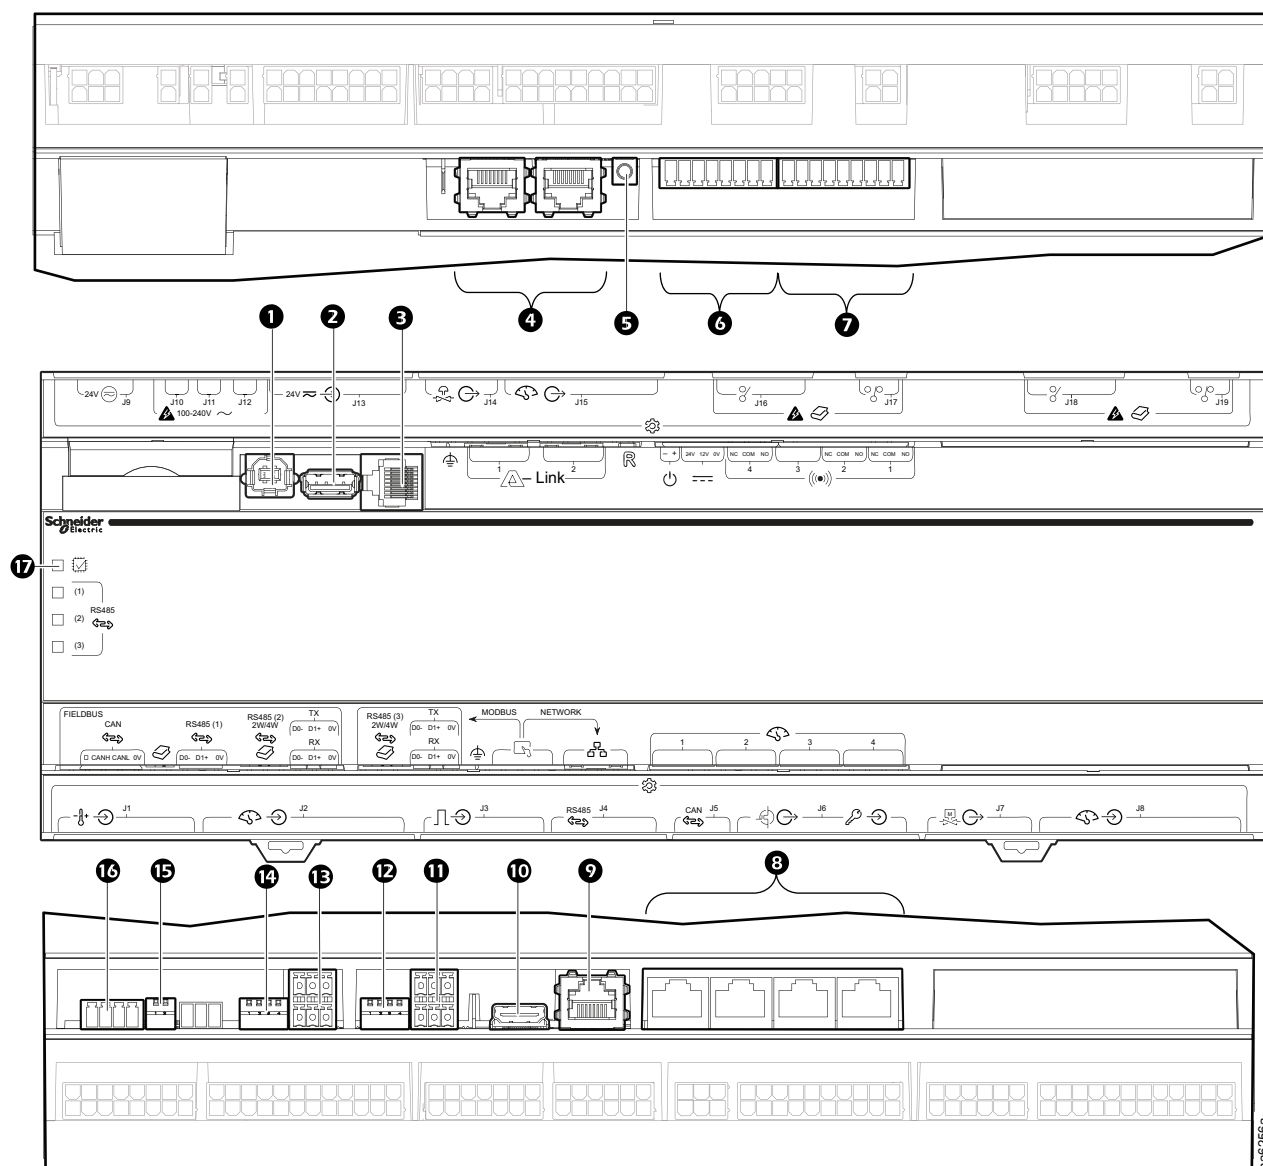

na6255a

Item	Description	Item	Description
1	USB device port	10	Touch screen display connection
2	USB host port (Not available)	11	Modbus connection
3	Serial port (Not available)	12	Modbus configuration switches
4	A-Link ports	13	Fieldbus Modbus connection (Not available)
5	Reset button	14	Fieldbus Modbus configuration switches (Not available)
6	Output relay 4/standby input	15	Fieldbus CANbus configuration switches
7	Output relay 1–3 (Not available)	16	Fieldbus CANbus connection
8	Universal sensor ports	17	Processor status LED
9	Network connection		

A-Link Connections

**NOTE:** All input and output connections should be wired as Class 2 circuits.

The A-Link bus connection allows a maximum group of twenty (20) InRow ACRD30X units to communicate with each other.

To enable the units to function as a group, link them together using a standard pin-out CAT-5 cable with RJ-45 connectors. The A-Link bus must be terminated at the first and last unit installed in the group. An A-Link terminator is supplied with each unit.

**NOTE:** The maximum wire length for the entire group must not exceed 500 m (1640 ft).

Active Flow Controllers (AFC)

AFC units are installed in the cooling group in a HACS or CACS environment, they are connected to the A-Link bus as shown. If the cooling group is in an under floor environment, the AFC unit is connected through the J5 port on the controller.

<b>NOTICE</b>
<b>CAT 5 PINOUT</b> Devices connected on the A-Link ports should use a standard pin-out (1-1, 2-2, 3-3, 4-4, 5-5, 6-6, 7-7, 8-8) CAT5 cable only. <b>Failure to follow these instructions can result in equipment damage.</b>



See the *AFC Installation Manual* for more information.

## Control the Environment

The primary function of the cooling unit is to cool air from the hot aisle and deliver it to the cold aisle at the temperature setpoint. The control strategies employed by the cooling unit depend upon the deployment strategy of the cooling group.

In an InRow environment, the cooling unit supplies constant-temperature supply air to the common cold aisle. The fan speed is modulated to ensure that the desired volume of air reaches the IT equipment. The fan speed is determined by the difference between the cooling setpoint and the maximum rack air inlet temperature.

In a HACS or RACS environment, the cooling unit neutralizes the heat accumulated in the common hot aisle and expels it back into the surrounding environmental space while maintaining the desired temperature in the cold aisle.

In a CACS environment, the cooling unit supplies constant temperature supply air to the enclosed cold aisle. The fan speed is modulated to ensure that the required volume of air reaches the IT equipment.

## How the Modes of Operation Work

**Path: Main > Configuration > Group > Cooling**

**Path: Main > On/Off**

**NOTE:** The **Cooling Strategy** settings in both menus are the same setting.

The cooling control varies based on the **Cooling Strategy** setting.

- **Cooling Strategy:** The cooling unit uses a direct-expansion coil and a variable-speed compressor to modulate refrigerant flow through the coil, and a set of fans to control airflow through the coil. The cooling output is determined by the difference between the supply setpoint and the supply air temperature of the cooling unit.
  - **INROW:** The fan speed is controlled by comparing the rack inlet temperature to the cooling setpoint. As the rack temperature increases compared to the cooling setpoint the fans increase output to maintain the setpoint. As rack inlet temperature decreases compared to the cooling setpoint the fans decrease output to maintain the setpoint.
  - **RACS/HACS:** When Active Flow Controller (AFC) devices are present, the controller utilizes differential pressure data supplied by the AFC(s) to supply the correct amount of airflow to the IT load. When AFC devices are not present, the fan speed is controlled by the fan speed preference setting. The fan speed can be selected based on the temperature differential across the cooling unit. As return temperatures deviate from the fan speed preference setting, the fan speed increases to bring the temperature difference back down to the setpoint or decreases fan output to increase the unit temperature differential. By maintaining the desired temperature differential, the system matches the airflow requirements of the load.
  - **CACS:** When AFC devices are present, the controller utilizes differential pressure data supplied by the AFC(s) to supply the correct amount of airflow to the IT load. When AFC devices are not present, the evaporator fan speed is controlled by comparing the rack inlet temperature to the cooling setpoint. As the rack temperature increases compared to the cooling setpoint, the fans increase output to maintain the setpoint. As rack temperature decreases compared to the cooling setpoint the fans decrease output to maintain the setpoint.
  - **Manual:** The fan speed is controlled by the user-input value for **Manual IT Fan Speed**.

The cooling unit is equipped with compressor cycling control that tries to minimize the number of times the compressor cycles on and off. The compressor will cycle off when the supply air temperature drops below 13°C (55.4°F) whether or not the minimum compressor on time of three minutes has elapsed. Once off, the compressor will not normally cycle on until the supply temperature reaches its setpoint and the minimum off time of two minutes has elapsed. However, the

compressor will cycle on regardless of off time if it is a standalone unit or if the unit is power cycled, the compressor will cycle on regardless of whether the minimum off time has elapsed (InRow and CACS only).

Compressor cycles are monitored over a seven-day period. If the number of cycles average more than 12 per hour over that period, the **Excessive Compressor Cycling** alarm is set.

## Setpoints

A setpoint is the target value that a cooling group tries to maintain in the environment. The default setpoints are appropriate for most cooling applications.

**NOTE:** Changing the settings incorrectly can cause malfunctions to your cooling unit. Only qualified service personnel should make changes to these settings.

**NOTE:** Displayed settings may vary based on model and unit configuration.

**Path: Main > Configuration > Group > Cooling**

- **Cooling Strategy:** Select the cooling strategy used to control the operation of the unit. (**RACS, HACS, INROW, CACS, Manual**)



See the *How the Modes of Operation Work*, page 39 for more information on the types of cooling strategy.

- **Supply Air Setpoint:** The **Supply Air Setpoint** is the required temperature of the air expelled into the surrounding environment. (15.0–30.2°C (59.0–86.4°F))  
**NOTE:** The **Supply Air Setpoint** is defined by Schneider Electric qualified personnel when the cooling group is commissioned.
- **Cool Setpoint:** Set the temperature that the cooling group should maintain in the IT space. (17.8–35.0°C (64.0–95.0°F))
- **Delta-T Setpoint:** When the group is programmed for HACS or RACS mode, this value specifies the desired temperature difference between the supply and return air temperatures when an AFC is not present. (**10F/5.6C, 15F/8.3C, 20F/11.1C, 25F/13.9C, 30F/16.7C, 35F/19.4C, 40F/22.2C**)

**NOTE:** Set a lower **Cool Setpoint** or a smaller **Delta-T Setpoint** to assist with start-up during winter.

- **Load Assist Enable:** When set to **Enable**, provides extra capacity via a backup cooling unit in the event that a primary unit is unable to service the demand. When the assistance is no longer needed, the unit will return to the backup state.  
**NOTE:** Redundancy (backup units), runtime balancing, and load assist modes are only supported in HACS, RACS, and CACS configurations.
- **Runtime Balancing Enable:** When set to **Enable**, the system maintains similar run times between units in the group. When the difference between the runtime hours of the cooling units in the system exceeds the value entered for **Runtime Balancing Difference**, the system will automatically exchange modes between the longest running primary unit and the backup unit with equal or greater capability if available with the least runtime hours.  
**NOTE:** The runtime balancing cap is not adjustable. Runtime hours are hours that the cooling unit is actually operating and NOT 72 consecutive hours (three days) of time.
- **Runtime Balancing Difference:** Enter the number of hours used to maintain runtime balancing in the cooling group. (24–720 hours)
- **Switchover Handoff Time:** Enter the length of time that the currently active unit will remain on after another unit is made the active unit. Both units will be running during this time. (0–30 minutes)



## Active Flow Controller (AFC) Settings

### Path: Main > Configuration > Containment Systems


- **Number of Active Flow Controllers:** Set the number of Active Flow Controller units in the group. (0–5)
- **Active Flow Control Lamp Test:** When set to **On**, the Active Flow Controller (s) LEDs will cycle through a red, green, and blue illumination pattern.
- **Active Flow Control Bias:** This setting is used to change the bias of the controller by adjusting the contained aisle pressure threshold. **Zero** is the default setting. Only qualified service personnel can make changes to these settings.
  - Hot Aisle Containment (HACS)
    - If the cooling units seem to be under-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for less cooling.
  - Cold Aisle Containment (CACS)
    - If the cooling units seem to be under-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for less cooling.

Setting	Blue LED—HACS Red LED—CACS	Setpoint Green LED	Red LED—HACS Blue LED—CACS
<b>Positive</b>	< –0.008 in. ±3%	0.004 ±0.0004 in.	> 0.016 in. ±3%
<b>Slightly Positive</b>	< –0.010 in. ±3%	0.002 ±0.0004 in.	> 0.014 in. ±3%
<b>Zero</b>	< –0.012 in. ±3%	0.000 ±0.0004 in.	> 0.012 in. ±3%
<b>Slightly Negative</b>	< –0.014 in. ±3%	–0.002 ±0.0004 in.	> 0.010 in. ±3%
<b>Negative</b>	< –0.016 in. ±3%	–0.004 ±0.0004 in.	> 0.008 in. ±3%

## Envelope Management

Envelope management is used to control the acceptable operating range for compressors.

### Variable-Speed Compressor Operating Range

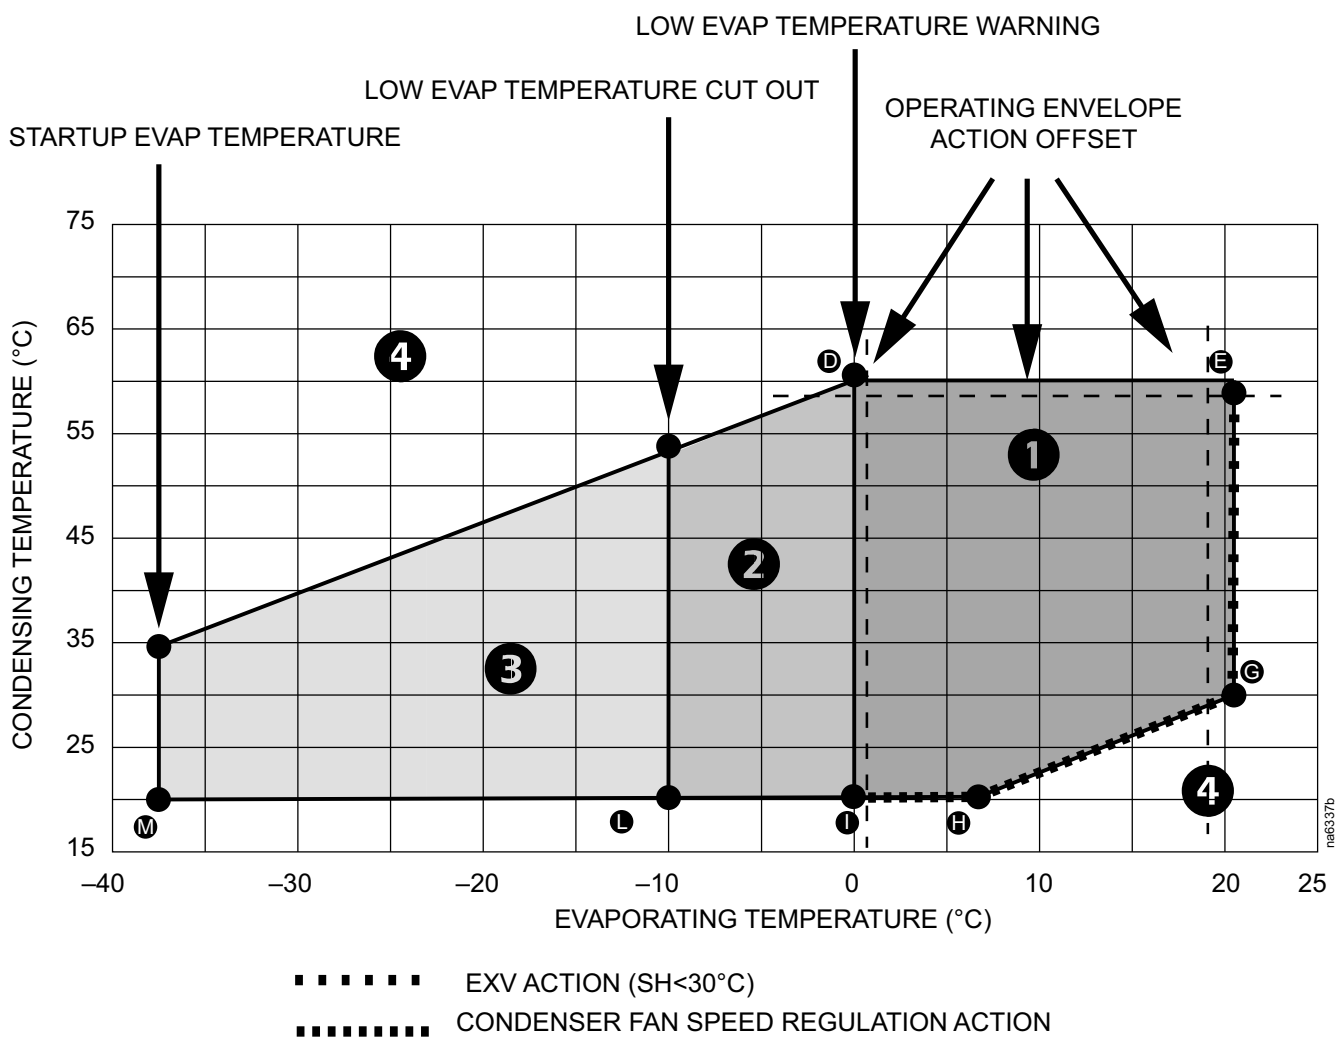

**NOTE:** The operating envelope for your unit will differ based on unit settings and compressor model; this example is based on default values for the VZH044CG compressor model.

Data Point	Condensing Pressure – barg	Evaporating Pressure – barg	Data Point	Condensing Pressure – barg	Evaporating Pressure – barg
D	36.95	11.56	I	13.45	6.97
E	17.86	11.56	L	13.45	4.71
H	13.45	8.33	M	13.45	1.00

Zone	Description	Zone	Description
1	Open operating area	3	Compressor can operate in this region for a maximum of 240 seconds at start-up
2	Compressor can operate in this region for a maximum of 240 seconds at any time during the compressor run cycle	4	Not acceptable operating range

The compressor will be allowed to start if the evaporation temperature exceeds the **Startup Evap Temperature** value. The compressor can operate in zone 3 for a maximum of 240 seconds only after startup. After the evaporation temperature enters zone 2, the compressor can operate in this zone for a maximum of 240 seconds. After the evaporation temperature enters zone 1, it can return to zone 2.

for a maximum of 240 seconds. If the evaporation temperature drops below the **Low Evap Temperature Cut Out** value at any time after entering zone 2, it will turn off the compressor. The compressor can run in zone 1 indefinitely. The compressor will not operate in zone 4.

The controller continually adjusts the condensing temperature setpoint such that it follows the dashed line between **1**, **H**, and **G**. This causes the condenser fan to drive the condensing temperature as low as possible thus reducing the load on the compressor.

If the evaporating temperatures near the limits of the operating envelope, the controller will take actions to keep the compressor operating within the accepted ranges.

- If the evaporating temperature reaches a temperature within **Op. Env. Action Offset** degrees of the operating envelope boundaries formed by points **E** and **G**, the controller will adjust the electronic expansion valve (EXV) to keep the evaporating temperature within the acceptable range.
- If the evaporating temperature reaches a temperature within **Op. Env. Action Offset** degrees of the operating envelope boundary formed by points **D** and **1**, the controller will adjust the compresspr speed to keep the evaporating temperature within the acceptable range.
- If the condensing temperature reaches a temperature within **Op. Env. Action Offset** degrees of the operating envelope boundary formed by points **D** and **E**, the controller will adjust the compressor speed to keep the condensing temperature within the acceptable range.



See *Compressor Settings*, page 81.

## Run Hours and Service Intervals

### Run Hours

The cooling unit records the number of hours select components have been in operation. When a component is replaced, use the **Run Hours Reset** menu to reset the run hours for the displayed component to zero. These settings are read-only values.

**Path: Main > Status > Hours**

- **Unit Run Hrs**
- **Air Filter Run Hrs**
- **Compressor Run Hrs**
- **Condenser Fan Run Hrs**
- **Condensate Pump Run Hrs**
- **Fan 1 Run Hrs**
- **Fan 2 Run Hrs**
- **Fan 3 Run Hrs**
- **Fan 4 Run Hrs**
- **Fan 5 Run Hrs**
- **Fan 6 Run Hrs**
- **Fan 7 Run Hrs**
- **Fan 8 Run Hrs**

**NOTE:** Fan 1 is the bottom fan; fan 8 is the top fan.

### Reset Run Hours

**Path: Main > Configuration > Service > Run Hours Reset**

Settings under this menu are used to reset the run hour alarms that are configured as reminders for regular maintenance inspection.

Select **Reset** and press **OK** to reset the run hours for an individual component. The following components can have run hour alarms reset:

- Unit Alarm Reset
- Compressor Alarm Reset
- Air Filter Alarm Reset

### Service Intervals

**Path: Main > Configuration > Unit > Alarms > Maintenance**

Each component interval setting has an alarm. If set to **Enable**, the annunciator will sound when the service interval for the component has elapsed. The alarms are cleared by selecting the check box for the **XXX Alarm Reset** for each component to reset the service alarm and pressing **OK**. Enable service interval alarms and set the number of weeks to service the following components:

- **Unit Run Hours:** Displays the total hours the unit has been in operation.
- **Unit Alarm Enabled:** Select to **Enable** or **Disable** the alarm.
- **Unit Alarm Interval:** Set the interval for the service alarm for the cooling unit. (1–300 wk)
- **Air Filter Run Hrs:** Displays the number of hours the filters have been in use.
- **Air Filter Alarm Enabled:** Select to **Enable** or **Disable** the alarm.
- **Air Filter Alarm Interval:** Set the interval for the service alarm for the air filters. (1–300 wk)

## User Security Settings

The **Security** menus under the **Display** menu include options for user access to the unit.

### Add a New User or Edit an Existing User

**Path:** Main > Configuration > Display > Security

1. Select **Add User** to add a new user or select **Edit User** to edit an existing user of the system.
2. In the **Name** field, enter the name of the user.
3. In the **Pin** field, enter a pin code for the user.
4. In the **Confirm Pin** field, re-enter the pin code of the user.
5. Press **OK** to save your settings.

### Delete a User

**Path:** Main > Configuration > Display > Security > Delete User

1. Browse to the user that you wish to delete using the up and down arrows and press **OK**.
2. Press **Yes** to confirm deletion of an existing user of the system.

## Display Settings

The **Display** menus set the display interface settings, including time and date, units, passwords, and time-out. You can also adjust the contrast and sound settings.

### Language, Date, Time, and Temperature

**Path:** Main > Configuration > Display > Preferences

- **Language:** Select the correct language for the display.
- **Date Format:** Select the display format for the date.
- **Temperature:** Select **Metric** or **US Customary** for temperature format.
- **Manual:** Manually enter the current and time instead of retrieving from a server.
  - **Current Date:** Enter the day, month, and year. The date is displayed on some status screens and is also used in the alarm/event log to date-stamp events.
  - **Current Time:** Enter the current time for the display.
- **Synchronize with NTP Server:** Select to sync the time and date with the Network Time Protocol server.

## Screen Visibility and Audible Tones

**Path: Main > Configuration > Display > System Settings**

- **Alarm Volume:** Select the level of audio at which alarms will sound (**Off**, **Low**, **Medium**, or **High**).
- **Button Volume:** Select the volume at which a tone will be produced every time a button is pressed on the display interface. The audible tone can also be set to **Off**.
- **Brightness:** Controls the visibility of the display.
- **Enable Backlight Timeout:** **Enable** or **Disable** backlight timeout settings.
- **Backlight Timeout:** Adjust the backlight timeout settings.
  - **Minutes:** Turns off unit backlight after a specified amount of time. Timeout range is 1–60 minutes.
  - **Intensity:** Select the visibility of the display during backlight timeout.
    - **Off:** The display will remain at the normal intensity level.
    - **Very Low:** The display will be very dim.
    - **Low:** The display will be dim.
    - **Medium:** The display will dim to about half of the normal brightness.
- **Auto Logoff:** Automatically signs current user out of the system after specified amount of time. Options are 1, 5, 10, 30, or 60 minutes.

## Restore Defaults

**Path: Main > Configuration > Restore Defaults**

The **Restore Defaults** screen is used to restart the display and reset display settings to factory defaults.

**NOTE:** The controller settings will not be restored.

Configuration Restore Defaults

☐ Restart Network Interface  
☐ Reset All  
     ☐ Exclude TCP/IP  
☐ Reset Only  
     ☐ TCP/IP  
     ☐ Event Configuration  
     ☐ Display Settings

ESC OK

na6262a

# Network Configuration

The cooling unit is shipped with a Network Management Card (NMC) that enables you to manage the cooling unit over your network. Configure the network settings for the cooling unit Network Management Card from the display interface. The management card allows remote control and configuration of the equipment.

## Configure the Network

### TCP/IPv4 Settings

**Path: Main > Configuration > Network > TCP/IPv4**

Enable IPv4 (if applicable), and select the **Address Mode** (**Manual**, **DHCP**, **BOOTP**).

- **Manual:** Enter the IP Address, subnet mask, and default gateway.
- **BootP:** Set the Network Management Card of the cooling unit to obtain its network settings from a BootP server.
- **DHCP:** Set the Network Management Card of the cooling unit to obtain its network settings from a DHCP server. Select whether or not to require vendor-specific cookies to accept the DHCP address.

### TCP/IPv6 Settings

**Path: Main > Configuration > Network > TCP/IPv6**

Enable IPv6 (if applicable).

- Select **Auto Configuration** or **Manual Configuration**, and select the **DHCPv6 Mode** (**Router Controlled**, **Non-Address Information Only**, **Address and Other Information**, or **Never**).
- For **Manual Configuration**, enter the **System IP** and **Default Gateway**.

### Web Access Settings

**Path: Main > Configuration > Network > Web Access**

Enable Web (if applicable) and select the **Access Mode** (**HTTP** or **HTTPS**) and enter the **Port**.

### FTP Server Settings

**Path: Main > Configuration > Network > FTP Server**


Enable FTP (if applicable) and enter the **Port**.

# View Status Readings

The display interface has several options for viewing the status of the cooling unit, the cooling group to which the cooling unit belongs, and the environment being controlled. The status readings for the cooling unit are available under the **Status > Unit** screen, and status readings for the cooling group are available under the **Status > Group Status** screen or on the overview screen.

## Overview Screen

After start-up, the display shows an overview screen containing basic status information. Press **Home** to toggle between the main menu and overview screen. After a period of inactivity, the display also reverts back to the overview screen.

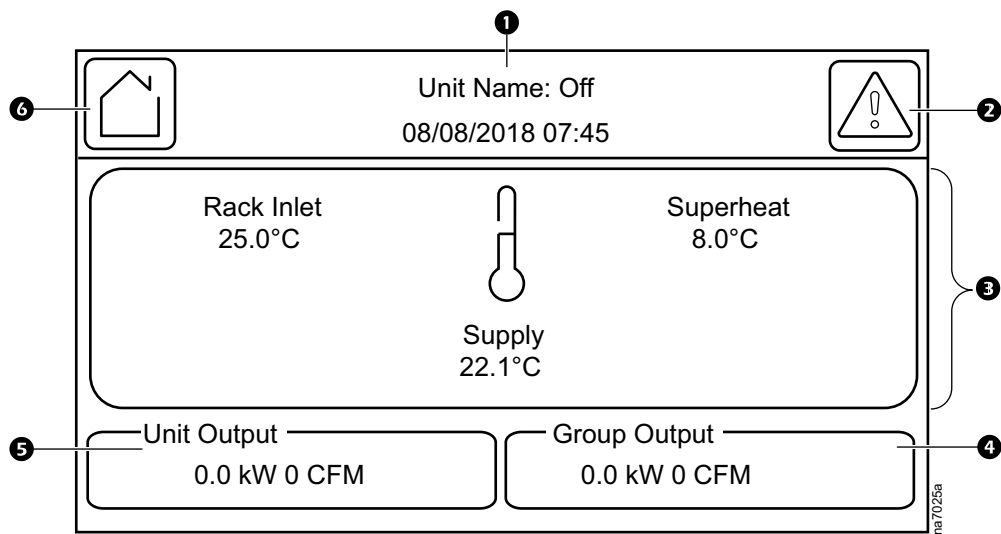

Item	Description
1	Unit operational status and current date and time
2	Alarms button
3	<ul style="list-style-type: none"><li><b>Rack Inlet:</b> The average reading from rack inlet temperature sensors connected to this unit. This is displayed when the <b>Cooling Strategy</b> is set to <b>INROW</b>, <b>CACS</b>, or <b>Manual</b>.</li><li><b>Return Temp:</b> The return air temperature reading. This is displayed when the <b>Cooling Strategy</b> is set to <b>HACS</b> or <b>RACS</b>.</li><li><b>Superheat:</b> The superheat reading for this unit: the temperature difference between refrigerant entering and leaving the coil.</li><li><b>Supply:</b> The average temperature from the top and bottom supply air temperature sensors connected to this unit.</li></ul>
4	The total cooling output and airflow of all units in the cooling group.
5	The cooling output and airflow of this unit.
6	Home button



## Cooling Unit Status

### Path: Main > Status > Unit

View information specific to this cooling unit.

**NOTE:** These are read-only values.

- **Mode:** Displays the current operational mode of the unit.
  - **Unknown:** A status cannot be currently acquired.
  - **Init:** Unit is currently initializing.
  - **Off:** Unit is currently off.
  - **Standby:** Unit is in standby mode.
  - **Delaying:** Unit is delaying start until the **Startup Delay** time has elapsed.
  - **Active:** Unit is currently cooling.
- **Supply (Average) Temperature:** The average temperature from the top and bottom supply air temperature sensors connected to this unit. (°C (°F))
- **Rack (Average) Temperature:** The average reading from rack inlet temperature sensors connected to this unit. (°C (°F))
- **Return (Average) Temperature:** The average temperature from the top and bottom return air temperature sensors connected to this unit. (°C (°F))
- **Humidity:** The current relative humidity of the IT room. (%RH)
- **Airflow:** The current airflow output of the unit. (l/s (ft<sup>3</sup>/m))
- **Air Filter Pressure:** The current air pressure at the air filter. (Pa (in. WC))
- **Cool Demand:** The cooling output required to meet the current heat load of the conditioned space. (kW)
- **Cool Output:** The combined output of the cooling unit. (kW)

## Cooling Group Status

**Path: Main > Status > Group Status**

View information specific to this cooling group.

**NOTE:** These are read-only values.

- **Group Minimum Rack Temperature:** The lowest rack temperature reported by any cooling unit in the cooling group. (°C (°F))
- **Group Maximum Rack Temperature:** The highest rack temperature reported by any cooling unit in the cooling group. (°C (°F))
- **Group Dew Point Temperature:** The average group dew point temperature. (°C (°F))
- **Total Airflow:** The combined airflow output of the cooling units in the cooling group. (l/s (ft<sup>3</sup>/m))
- **Total Air Side Cooling Demand:** The cooling output required to meet the current heat load of the conditioned space. (kW)
- **Total Sensible Cooling Power:** The combined output of the cooling group. (kW)
- **Active Flow Control Status:** The conditional state of the containment air pressure differential measurement device (AFC).
  - **Under:** The air flow status on at least one AFC unit is insufficient. The LED on the AFC will be illuminated as red.
  - **OK:** There is nominal air flow status on all AFC units. The LED on the AFC will be illuminated as green.
  - **Over:** There is a surplus of air flow status on at least one AFC unit. The LED on the AFC will be illuminated as blue.
  - **NA:** There are no AFC units installed or no status reading is available.



See *Active Flow Controller (AFC) Settings*, page 41 for information on adjusting the **Active Flow Control Bias**.

## Sensor Readings

**Path: Main > Status > Details > Environment**

The **Environment** menu provides the readings from sensors connected to the unit.

- **Upper Supply Temperature:** The temperature from the top supply air temperature sensor connected to this unit. (°C (°F))
- **Lower Supply Temperature:** The temperature from the bottom supply air temperature sensor connected to this unit. (°C (°F))
- **Upper Return Temperature:** The temperature from the top return air temperature sensor connected to this unit. (°C (°F))
- **Lower Return Temperature:** The temperature from the bottom return air temperature sensor connected to this unit. (°C (°F))
- **Room Temperature:** The temperature of the ambient air in the IT space. (°C (°F))
- **Humidity:** The relative humidity of the air in the IT space. (%RH)
- **Dew Point Temperature:** The dew point of the IT space. (°C (°F))
- **Rack Inlet Temperature 1:** The temperature from the rack inlet 1 air temperature sensor connected to this unit. (°C (°F))
- **Rack Inlet Temperature 2:** The temperature from the rack inlet 2 air temperature sensor connected to this unit. (°C (°F))

- **Rack Inlet Temperature 3:** The temperature from the rack inlet 3 air temperature sensor connected to this unit. (°C (°F))
- **Rack Inlet Temperature 4:** The temperature from the rack inlet 4 air temperature sensor connected to this unit. (°C (°F))

## Refrigerant System

### Path: Main > Status > Details > DX

The **DX** menu provides information for the refrigerant system components and pressure and temperature readings.

**NOTE:** These are read-only values.

- **Suction Pressure:** The pressure of the refrigerant at the suction line. (bar (psi))
- **Discharge Pressure:** The pressure of the refrigerant at the discharge line. (bar (psi))
- **Suction Evap. Temp.:** The temperature of the refrigerant at the suction line. (°C (°F))
- **Discharge Cond. Temp.:** The temperature of the refrigerant at the discharge line. (°C (°F))
- **Outlet Evap Coil Temperature:** The temperature of the refrigerant leaving the evaporative coil. (°C (°F))
- **Inlet Evap Coil Temperature:** The temperature of the refrigerant entering the evaporative coil. (°C (°F))
- **Superheat:** The temperature difference required to keep the refrigerant in a gaseous state. (Δ°C (Δ°F))
- **Avg Fan Speed:** The current average speed of the eight fans in the unit. (%)
- **Compressor Speed:** The current speed of the compressor. (Hz)
- **EEV Position:** The current open percentage of the electronic expansion valve. (%)
- **Condenser Fan Speed:** The current speed of the condenser fan. (%)

## Power Information

**Path: Main > Status > Details > Power**

The **Power** menu provides power consumption information for components in the unit.

**NOTE:** These are read-only values.

- **Power Feed Type:** Displays whether the indoor unit has a **Single** or **Dual** power feed.
- **Active Power Source:** Displays if the unit is using the primary or secondary power source.
- **Primary Power Source:** If the power source is **Bad**, then the ATS will transfer to the secondary power supply.
- **Secondary Power Source:** If the secondary power source is good, then it can be used in the event of primary source is bad.
- **Fan Power Supply 1:** The current draw of fan power supply 1. (A)
- **Fan Power Supply 2:** The current draw of fan power supply 2. (A)
- **Condenser Fan Power:** The current draw of the condenser fan. (W)
- **Compressor Power:** The current draw of the compressor. (kW)

## Input/Output States

**Path: Main > Status > Details > Input/Output**

The **Input/Output** menu provides the current state of input/output connections.

**NOTE:** These are read-only values.

- **Standby Input State:** The current state of the shutdown input. (**Open** or **Closed**)
- **Alarm Relay 1:** The current state of alarm relay 1. (**Open** or **Closed**)
- **Alarm Relay 2:** The current state of alarm relay 2. (**Open** or **Closed**)
- **Alarm Relay 3:** The current state of alarm relay 3. (**Open** or **Closed**)
- **Alarm Relay 4:** The current state of alarm relay 4. (**Open** or **Closed**)

## About the Network

View identifying information about the cooling network parameters (IPv4 or IPv6).

**Path: Main > About > Network**

**IPv4 Configuration:** If IPv4 is used, this section will display IPv4 information.

- **Enabled:** Identifies whether the specified network is enabled or not.
- **Mode:** Identifies how the IP address is obtained.
- **IP Address:** The IP address of the unit.
- **Subnet Mask:** The subnet mask for the sub-network.
- **Default Gateway:** The default gateway address used by the network.

**IPv6 Configuration:** If IPv6 is used, this section will display IPv6 information.

Press **Addresses** to view all assigned IPv6 addresses.

- **Enabled:** Identifies whether the specified network is enabled or not.
- **Auto Configuration:** Displays **Yes** if the IP address is assigned automatically.
- **Manual Configuration:** Displays **Yes** if the IP address is assigned manually.
- **DHCPv6 Mode:** The DHCPv6 mode.
  - **Router Controlled:** DHCPv6 is controlled by the **M** (Managed Address Configuration Flag) and **O** (Other Stateful Configuration Flag) flags received in IPv6 Router Advertisements. When a router advertisement is received, the network management card (NMC) checks whether the **M** and **O** flags are set. The NMC interprets the state of the **M** and **O** “bits” for the following cases:
    - Neither is set: Indicates local network has no DHCPv6 infrastructure. The NMC uses Router Advertisements and/or manual configuration to get non-link-local addresses and other settings.
    - **M**, or **M** and **O** are set: In this situation, full DHCPv6 address configuration occurs. DHCPv6 is used to obtain addresses AND other configuration settings. This is known as DHCPv6 stateful. Once the **M** flag has been received, the DHCPv6 address configuration stays in effect until the interface in question has been closed, even if subsequent Router Advertisement packets are received in which the **M** flag is not set. If an **O** flag is received first, then an **M** flag is received subsequently, the NMC performs full address configuration upon receipt of the **M** flag.
    - Only **O** is set: In this situation, the NMC sends a DHCPv6 Info-Request packet. DHCPv6 is used to configure “other” settings (such as location of DNS servers), but NOT to provide addresses. This is known as DHCPv6 stateless.
  - **Address and Other Information:** DHCPv6 is used to obtain addresses AND other configuration settings. This is known as DHCPv6 stateful.
  - **Non-Address and Information Only:** DHCPv6 is used to configure “other” settings (such as locations of DNS servers), but NOT to provide addresses. This is known as DHCPv6 stateless.
  - **Never:** If this radio box is selected, DHCPv6 is NOT to be used for any configuration settings.

## About the Unit

View identifying information that is helpful when obtaining service.

**NOTE:** Displayed settings are read-only and will vary based on unit type and configuration.

**Path:** Main > About > Unit

- **Model Number:** The model number of the unit.
- **Serial Number:** The serial number of the unit.
- **Firmware Revision:** The firmware revision of the unit.
- **Development Firmware Revision:** The developmental firmware revision of the unit.
- **Hardware Revision:** The hardware revision of the unit.
- **Manufacture Date:** The date the cooling unit was manufactured.
- **PIC1 Firmware Revision:** The firmware revision of the PIC1 processor.
- **PIC2 Firmware Revision:** The firmware revision of the PIC2 processor.

## About the AFC

**Path:** Main > About > AFC

View information about the Active Flow Controller units in the cooling group.

- **Serial Number:** The serial number of the AFC.
- **Firmware Revision:** The firmware revision of the AFC.
- **Hardware Revision:** The hardware revision of the AFC.
- **Model Number:** The model number of the AFC.
- **Lamp Test Enable:** Select the check box and press **OK** to test the LED on the AFC. The LED will cycle through a red, green, blue illumination pattern until the user stops the test. To stop the LED test, deselect the check box and press **OK**.

## About the Display

**Path:** Main > About > Display > Device

Information about the physical display device.

- **Model Number:** The model number of the display interface.
- **Serial Number:** The serial number of the display interface.
- **Hardware Revision:** The hardware revision of the display interface.
- **Manufacture Date:** The date the display interface was manufactured.
- **MAC Address:** The MAC address of the unit.

**Path:** Main > About > Display > Firmware






View identifying revision information about the display interface firmware:

- Application
- APC OS (AOS)
- APC Boot Monitor
- Video Driver
- FPGA
- FONTS

# Logs

## Event Log

The **Event Log** saves status information and a message each time a change in the unit is detected. Alarms and events are recorded in the log and displayed on the **Active Alarms** screen. Status events (informational) and system configuration changes are only displayed in the event log.

EVENT SEVERITY	<div> <div>Home</div> <div>Logs</div> <div>Event Log</div> <div>Checkmark</div> </div>	
	Date/Time	Event
	09/20/2016 15:56:21	 Data Log cleared
	09/20/2016 15:56:21	 Configuration change. Data log size.
	09/20/2016 15:53:32	 Web user 'apc' logged in from XX.XXX.XXX.XXX.
	09/20/2016 15:47:34	 FTP user 'apc' logged in from XX.XXX.XXX.XXX.
	09/20/2016 15:32:38	 FTP user 'apc' logged in from XX.XXX.XXX.XXX.
<div> <div>Clear Log</div> <div>First</div> <div>Back</div> <div>1 / 80</div> <div>Forward</div> <div>Last</div> <div>Filter Log</div> </div>		
<div> <div>CLEAR LOG</div> <div>FIRST</div> <div>BACK</div> <div>CURRENT PAGE/TOTAL PAGES</div> <div>FORWARD</div> <div>LAST</div> <div>FILTER LOG</div> </div>		

## View Event Log

### Path: Main > Logs > Event Log

The **Event Log** keeps a record of all alarms and events. The screen displays the following:

- The name of the event.
- The severity of the event.
- The time and date the event occurred.

Use the arrows to scroll through the list of events and display the date and time for each event.

## Filter Event Log

Events in the **Event Log** can be sorted by time or severity. Events can also be displayed by **Device Events** or **System Events**. Press **ESC** to return to the previous screen without making changes; press **OK** to accept changes.

The screenshot shows the 'Filter' screen of the Event Log. At the top, there are four tabs: 'Logs', 'Event Log', and 'Filter' (which is active), and a confirmation icon. Below the tabs, the 'Event Time' section has two radio buttons: 'Last' (selected) and 'From'. The 'From' section has two date/time input fields: '01/01/2001 00:00' and '09/27/2016 13:10'. Below this is the 'Filter by Severity' section with three checkboxes: 'Show Critical Events' (checked), 'Show Warning Events' (unchecked), and 'Show Informational Events' (unchecked). At the bottom, there are two buttons: 'Device Events' and 'System Events'. In the bottom right corner, there are 'ESC' and 'OK' buttons. A small vertical text 'na6294a' is visible on the right side of the screen.

The filter options for related **Device Events** are the following:

- Communication
- Temperature
- Fans
- Status
- Diagnostics
- Humidity
- Configuration

The filter options for related **System Events** are the following:

- Mass Configuration
- Security

## Clear Event Log

**Path: Main > Logs > Event Log**

1. Press the trash can icon in the bottom-left corner of the **Event Log** screen to clear the log. A confirmation screen is displayed.
2. Enter the Admin password to clear the log.
3. Select **Yes** to clear all of the events in the log. Select **No** to return to the **Event Log** screen.




## Data Log

### Path: Main > Logs > Data Log > Graphing

The **Data Log** is a graph showing the changes over time of selected readings. Select the data point to graph and press **+** to add the data point to the graph. To remove a data point from the graph, select the data point from the list and press **-**. To clear the graph, press **CLR**.

**NOTE:** Image is an example only; your screen may differ.

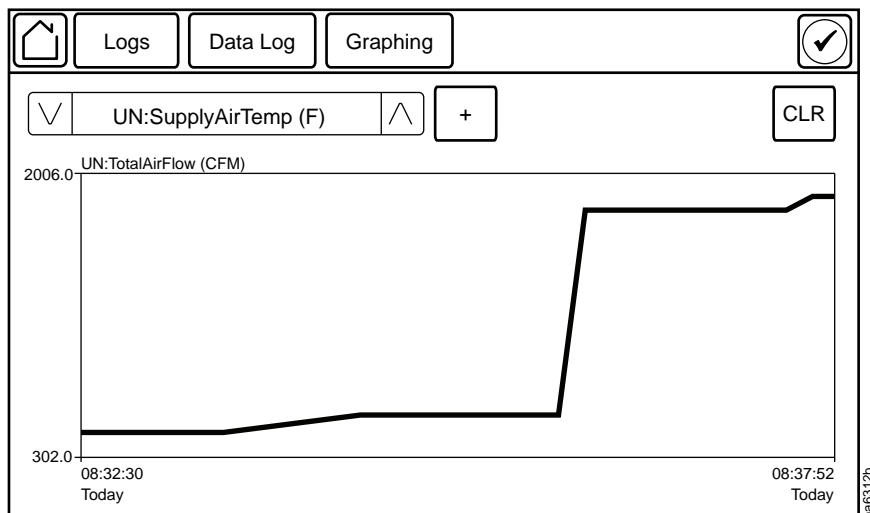

## Data Log Configuration

Select at what intervals (**Log Interval**) the data log will record an entry. When the size of the data log reaches the **Data Log Size** entry limit, the log will overwrite itself by deleting the first half of the data and continuing recording as normal.

The screenshot shows the 'Data Log Configuration' screen. At the top, there are navigation buttons: Home, Logs, Data Log, and Graphing. Below these, the 'Log Interval' is set to '[1 min - 18 hrs 12 mins]'. There are three input fields for 'hrs', 'mins', and 'secs'. Below this, the 'Data Log Size' is set to '[25 - 1500]'. There is a single input field for the size. At the bottom right, there are 'ESC' and 'OK' buttons. A small 'na7028a' label is visible in the bottom right corner.

## Export Data

### Path: Main > Logs > Export Data

The data export function exports a .tar file containing the following files:

- config.ini
- data.txt
- debug.txt
- event.txt

1. Insert a USB drive into the USB port of the display interface.
2. Press **Start Data Export**.
3. Confirm exporting the data to the USB drive.
4. Wait for the data to export or abort exporting by pressing **Abort Data Export**.
5. Press **OK** when the "Data exported successfully. Remove USB device." message displays.
6. Remove the USB drive from the display interface.

# Alarms

## Respond to Alarms

When an alarm is triggered, the unit alerts you through the display by the following methods:

- LEDs on the display interface
- Alarm icon in the upper-right corner of the screen
- An optional audible alarm every 30 seconds if enabled

## View Active Alarms

The **Active Alarms** screen is accessed by pressing the alarm icon in the upper-right corner of the screen. The **Active Alarms** screen provides the number of alarms, the severity, and a brief description of the alarm.

## Clear Active Alarms

1. Press **Clear** to clear the active alarms.  
A confirmation screen is displayed.
2. Enter the Admin password to erase the alarms list.
3. Select **Yes** to erase all of the alarms. Select **No** to return to the **Active Alarms** screen.

## Alarm Thresholds

**Path: Main > Configuration > Unit > Alarms > Thresholds**

Thresholds can be set to activate alarms to alert you to violations when the threshold is exceeded.

- **Supply Air High Temperature Threshold:** The high temperature threshold for the supply air as averaged by the supply air temperature sensors. If the temperature exceeds this threshold, an alarm will occur. (0–100°C (32–212°F))
- **Rack Inlet High Temperature Threshold:** The high temperature threshold for the rack inlet air temperature as averaged by the rack inlet temperature sensors. If the temperature exceeds this threshold, an alarm will occur. (0–100°C (32–212°F))
- **Return Air High Temperature Threshold:** The high temperature threshold for the air entering the cooling unit. If the temperature exceeds this threshold, an alarm will occur. (0–100°C (32–212°F))
- **Return Humidity High Threshold:** The relative humidity at which the high threshold alarm occurs. (35–90%RH)
- **Return Humidity Low Threshold:** The relative humidity at which the low threshold alarm occurs. (20–50%RH)
- **Clogged Filter Thresh.:** The pressure at which a clogged filter alarm occurs. (24.88–236.40 Pa (0.10–0.95 in. WC))

## Alarm Messages and Suggested Actions

Alarm Message	Severity	Action Required
AFC Fault	Warning	Contact Schneider Electric Technical Support.
AFC Firmware Revision Compatible	Critical	<ul style="list-style-type: none"> <li>Check revision of AFC firmware.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Air Filter Clogged	Warning	<ul style="list-style-type: none"> <li>Clean or replace the air filter.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Air Filter Has Exceeded Runtime Threshold	Warning	Reset the Air Filter Run Hours after the air filter is cleaned or replaced.
Air Filter Pressure Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Coil Freezing	Warning	If the problem persists, contact Schneider Electric Technical Support.
Condensate Pan Full	Warning	A hardware problem may exist: Contact Schneider Electric Technical Support.
Condensate Pan Overflowing	Critical	A hardware problem may exist: Contact Schneider Electric Technical Support.
Condenser Communication Failure	Critical	<ul style="list-style-type: none"> <li>Check the RS485 connection to the outdoor unit.</li> <li>Check power to outdoor unit.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Condenser Fan BAD	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Brake Op	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Cable Break	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Communication Error	Critical	<ul style="list-style-type: none"> <li>Check the RS485 connection to the outdoor unit.</li> <li>Check power to outdoor unit.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Condenser Fan Current Limitation	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Electronics Temperature High	Warning	Contact Schneider Electric Technical Support.
Condenser Fan DC Link Over Voltage	Critical	Contact Schneider Electric Technical Support.
Condenser Fan DC Link Under Voltage	Critical	Contact Schneider Electric Technical Support.
Condenser Fan DC Link Voltage Low	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Electronic Over Heated	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Hall Sensor Error	Critical	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Condenser Fan Locked Motor	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Low Speed	Warning	Contact Schneider Electric Technical Support.

Alarm Message	Severity	Action Required
Condenser Fan Mains Over Voltage	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Mains Under Voltage	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Motor Over Heated	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Motor Temperature High	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Line Impedance Too High	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Phase Failure	Critical	Contact Schneider Electric Technical Support.
Condenser Fan Power Limitation	Warning	Contact Schneider Electric Technical Support.
Condenser Fan Power Module Over Heated	Critical	Contact Schneider Electric Technical Support.
Condensate Pan Lower Float Switch Stuck or Failed	Critical	<ul style="list-style-type: none"> <li>• Check the float switch.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Condensate Pan Pump Control Failed	Critical	Contact Schneider Electric Technical Support.
Discharge Pressure Sensor Failed	Warning	<ul style="list-style-type: none"> <li>• Check the sensor connection.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Discharge Pressure Too High	Critical	<ul style="list-style-type: none"> <li>• Check condenser for obstructions.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
EcoAisle Door Open	Warning	<ul style="list-style-type: none"> <li>• Verify the aisle containment system door is shut properly.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Evaporator Fan Power Supply Failure	Critical	Contact Schneider Electric Technical Support.
Evaporator Fan Power Supply 'X' Failure	Warning	Contact Schneider Electric Technical Support.
EXV Error	Critical	Contact Schneider Electric Technical Support.
Fan #s Fault	Warning	A hardware problem may exist: Contact Schneider Electric Technical Support.
High Discharge Pressure Persistent	Critical	<ul style="list-style-type: none"> <li>• Indicates there were four Compressor High Pressure shutdowns in 30 minutes. Alarms must be cleared manually.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Humidity is Below Threshold	Warning	Contact Schneider Electric Technical Support.
Humidity is Above Threshold	Critical	Contact Schneider Electric Technical Support.
Inlet Evap Coil Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>• Check the sensor connection.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Input Voltage Has Not Been Configured	Critical	<ul style="list-style-type: none"> <li>• Check the <b>Voltage</b> setting in the <b>Main &gt; On/Off</b> menu.</li> <li>• If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Insufficient Air Flow	Warning	<ul style="list-style-type: none"> <li>• Verify the air ports are clear of obstructions and there is sufficient cooling capacity for the load.</li> </ul>

Alarm Message	Severity	Action Required
		<ul style="list-style-type: none"> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Internal Communication Error	Critical	A hardware problem may exist: Contact Schneider Electric Technical Support.
Leak Detected	Critical	<ul style="list-style-type: none"> <li>System is configured to enter idle mode when leak has been detected. Identify the source of the leak.</li> <li>If the problem persists, contact Schneider Electric Technical Support</li> </ul>
Low Suction Pressure Persistent	Critical	A hardware problem may exist: Contact Schneider Electric Technical Support.
Lower Return Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Lower Supply Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
No Standby Units Available	Warning	<ul style="list-style-type: none"> <li>Check to make sure cooling units in the group have the <b>Unit Role Override</b> setting on the <b>Main &gt; On/Off</b> screen is set to <b>Automatic</b> and that cooling units are available (not in a failed state).</li> <li>Check that the <b>Number of Backup Units</b> in the <b>Main &gt; Configuration &gt; Group &gt; Composition</b> menu is not set to zero (0).</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Outlet Evap Coil Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Output Relay # is Active	Informational	Informational message only: no action required.
PIC# Firmware Revision Incompatibility	Critical	<ul style="list-style-type: none"> <li>Check revision of PIC firmware.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Primary Power Source Failed	Warning	<ul style="list-style-type: none"> <li>Check power source.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Rack Inlet Temperature is Above Threshold	Warning	<ul style="list-style-type: none"> <li>Make sure the temperature sensor is connected and placed properly.</li> <li>Make sure the <b>Rack Inlet High Temperature Threshold</b> is set correctly in the <b>Main &gt; Configuration &gt; Unit &gt; Alarms &gt; Thresholds</b> menu.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Return Temperature is Above Threshold	Warning	<ul style="list-style-type: none"> <li>Make sure the <b>Return Air High Temperature Threshold</b> is set correctly in the <b>Main &gt; Configuration &gt; Unit &gt; Alarms &gt; Thresholds</b> menu.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>

Alarm Message	Severity	Action Required
Room Humidity Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Secondary Power Source Failed	Warning	<ul style="list-style-type: none"> <li>Check power source.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Smoke Detected	Critical	<ul style="list-style-type: none"> <li>Check for presence of smoke.</li> <li>Remove power from the unit and inspect for damage to internal wiring and components.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Suction Pressure Sensor Failed	Warning	A hardware problem may exist: Contact Schneider Electric Technical Support.
Suction Pressure Too Low	Critical	<ul style="list-style-type: none"> <li>Check the air filter and the evaporator for obstructions.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Suction Pressure Too Low to Start	Critical	A hardware problem may exist: Contact Schneider Electric Technical Support.
Superheat High or Low Persistent	Critical	Contact Schneider Electric Technical Support.
Superheat Too High	Critical	Contact Schneider Electric Technical Support.
Superheat Too Low	Critical	Contact Schneider Electric Technical Support.
Supply Temperature is Above Threshold	Critical	<ul style="list-style-type: none"> <li>Make sure the <b>Supply Air High Temperature Threshold</b> is set correctly in the <b>Main &gt; Configuration &gt; Unit &gt; Alarms &gt; Thresholds</b> menu.</li> <li>If the problem persists, contact Schneider Electric Technical Support</li> </ul>
Too Many Compressor Short Cycles	Warning	Contact Schneider Electric Technical Support.
Unexpected Number of AFCs	Warning	<ul style="list-style-type: none"> <li>Verify physical number of AFC units is set correctly in the <b>Main &gt; Configuration &gt; Service &gt; Containment Systems</b>.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Unexpected Number of Units in Group	Warning	<ul style="list-style-type: none"> <li>Check group CAN connection.</li> <li>Verify the number of units within the group is correct (<b>Main &gt; Configuration &gt; Group &gt; Composition</b>).</li> <li>If problem persists, contact Schneider Electric Technical Support</li> </ul>
Unit Has Exceeded Runtime Threshold	Warning	<ul style="list-style-type: none"> <li>Service the unit.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Unit is Idle	Critical	A hardware problem may exist: Contact Schneider Electric Technical Support.
Unit Off Due to Input Contact	Warning	<ul style="list-style-type: none"> <li>For an abnormal condition, check the remote contact switch and wiring for proper operation.</li> <li>For a normal condition, no action required.</li> </ul>

Alarm Message	Severity	Action Required
Upper Return Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
Upper Supply Temperature Sensor Failed	Warning	<ul style="list-style-type: none"> <li>Check the sensor connection.</li> <li>If the problem persists, contact Schneider Electric Technical Support.</li> </ul>
VFD Communication Failed	Critical	<ul style="list-style-type: none"> <li>Check the RS485 connection to the outdoor unit.</li> <li>Check power to outdoor unit.</li> <li>If problem persists, contact Schneider Electric Technical Support</li> </ul>
VFD Control Card Over Temperature	Critical	Contact Schneider Electric Technical Support.
VFD Control Card Over Temperature Warning	Warning	Contact Schneider Electric Technical Support.
VFD Control Voltage Overloaded	Warning	Contact Schneider Electric Technical Support.
VFD Current Limit Exceeded	Warning	Contact Schneider Electric Technical Support.
VFD Current Overload	Critical	Contact Schneider Electric Technical Support.
VFD Current Overload Warning	Warning	Contact Schneider Electric Technical Support.
VFD DC Link Voltage High	Warning	Contact Schneider Electric Technical Support.
VFD DC Link Voltage Low	Warning	Contact Schneider Electric Technical Support.
VFD DC Overvoltage	Critical	Contact Schneider Electric Technical Support.
VFD DC Overvoltage Warning	Warning	Contact Schneider Electric Technical Support.
VFD DC Undervoltage Warning	Warning	Contact Schneider Electric Technical Support.
VFD Drive Initialized To Defaults	Critical	Contact Schneider Electric Technical Support.
VFD Earth Fault	Critical	Contact Schneider Electric Technical Support.
VFD High Head Pressure Switch Activated	Critical	Contact Schneider Electric Technical Support.
VFD Inrush Error	Critical	Contact Schneider Electric Technical Support.
VFD Internal Error	Critical	Contact Schneider Electric Technical Support.
VFD Initialization Error	Critical	Contact Schneider Electric Technical Support.
VFD Mains Phase Loss	Critical	Contact Schneider Electric Technical Support.
VFD Motor Over Temperature	Critical	Contact Schneider Electric Technical Support.
VFD Motor Phase U Missing	Critical	Contact Schneider Electric Technical Support.
VFD Motor Phase V Missing	Critical	Contact Schneider Electric Technical Support.
VFD Motor Phase W Missing	Critical	Contact Schneider Electric Technical Support.
VFD Motor Thermistor Over Temperature	Critical	Contact Schneider Electric Technical Support.
VFD Peak Over Current	Critical	Contact Schneider Electric Technical Support.
VFD Persistent Trips	Critical	Contact Schneider Electric Technical Support.
VFD Power Card Temperature OK	Critical	Contact Schneider Electric Technical Support.
VFD Short Circuit	Critical	Contact Schneider Electric Technical Support.
VFD Speed Not Within Limits	Warning	Contact Schneider Electric Technical Support.



Alarm Message	Severity	Action Required
VFD Torque Limit Exceeded	Critical	Contact Schneider Electric Technical Support.
VFD Vd D1 Supply Low	Critical	Contact Schneider Electric Technical Support.
Wrong Number of Leak Detector Sensors	Warning	<ul style="list-style-type: none"><li>• Check the <b>Number of Leak Detectors in Unit</b> setting in the <b>Main &gt; Configuration &gt; Unit &gt; Components</b> menu.</li><li>• If the problem persists, contact Schneider Electric Technical Support.</li></ul>

# Network Management Card

## Quick Configuration

The unit is shipped with a Network Management Card that enables the unit to be managed over a network. Configure the Network Management Card to control this unit through a network.

### Overview

You must configure the following TCP/IP settings before the Network Management Card can operate on a network:

- IP address of the Network Management Card
- Subnet mask
- Default gateway

**NOTE:** Never use the loopback address (127.0.0.1) as the default gateway address for the Network Management Card. Doing so will disable the card and will require you to reset TCP/IP settings to their defaults using a local serial login.

**NOTE:** If a default gateway is unavailable, use the IP address of a computer that is located on the same subnet as the Network Management Card and that is usually running. The Network Management Card uses the default gateway to test the network when traffic is very light.



See “Watchdog Features” in the “Introduction” of the *User Manual* or *Online Guide* for more information about the watchdog role of the default gateway.

### TCP/IP Configuration Methods

Use one of the following methods to define the TCP/IP settings needed by the Network Management Card:

- Device IP Configuration Wizard (See *Device IP Configuration Wizard*, page 67 for more information.)
- BootP or DHCP server (See *BootP and DHCP Configuration*, page 67 for more information.)
- Local computer (See *Local Access to the Command Line Interface (CLI)*, page 70 for more information.)
- Networked computer (See *Remote Access to the Command Line Interface (CLI)*, page 69 for more information.)

## Device IP Configuration Wizard

The Device IP Configuration Wizard is used to discover and configure Network Management Cards that do not have IP addresses assigned. The Device IP Configuration Wizard runs on Microsoft® Windows® 2000, Windows 2003, Windows Server® 2003, Windows Server 2012, and on 32- and 64-bit versions of Windows XP, Windows Vista, Windows 2008, Windows 7, Windows 8, Windows 10, and Windows 2012 operating systems.

The Device IP Configuration Wizard supports network management cards that have firmware version 3.x.x or higher and is for IPv4 only.

**NOTE:** Most software Firewalls must be temporarily disabled for the Wizard to discover Network Management Cards that are not configured.



To configure one or more Network Management Cards from a user configuration file, see the *User Manual* or *Online Guide*.

1. Download the Device IP Configuration Wizard from [www.schneider-electric.com](http://www.schneider-electric.com) or [www.apc.com](http://www.apc.com) (search for “Device IP Configuration Wizard”).
2. Install and run the Device IP Configuration Wizard.
3. Follow the on-screen instructions.

**NOTE:** If you leave the option **Start a Web browser when finished** enabled, you can use `apc` (the default) for both the user name and password.

## .ini File Utility

You can use the .ini file export utility to export .ini file settings from configured Network Management Cards to one or more unconfigured Network Management Cards.

## BootP and DHCP Configuration

The default **TCP/IP Configuration, DHCP**, assumes that a properly configured DHCP server is available to provide TCP/IP settings to Network Management Cards. The possible settings are **Manual**, **DHCP**, or **BOOTP**.



If neither a DHCP nor BOOTP server is available, see *Device IP Configuration Wizard*, page 67 or *Remote Access to the Command Line Interface (CLI)*, page 69 for more information on how to configure the TCP/IP settings.

**BOOTP:** For the Network Management Card to use a BOOTP server to configure its TCP/IP settings, it must find a properly-configured RFC951-compliant BOOTP server.

1. In the BOOTPTAB file of the BOOTP server, enter the MAC address of the Network Management Card, and the IP addresses of the subnet mask and default gateway, and an optional bootup file name.

**NOTE:** Look on the nameplate of the unit for the MAC address. The MAC address is also available on the display interface at **Main > About > Display > Device**

2. When the Network Management Card reboots, the BOOTP server provides it with the TCP/IP settings.
  - If you specified a bootup file name, the Network Management Card attempts to transfer that file from the BOOTP server using TFTP or FTP. The Network Management Card takes on all settings specified in the bootup file.
  - If you did not specify a bootup file name, the Network Management Card can be configured remotely by using the CLI or the Web interface. User name and password are both `apc`, by default.



To create the bootstrap file, see your BOOTP server documentation.

**DHCP:** You can use a RFC2131/RFC2132-compliant DHCP server to configure the TCP/IP settings for the Network Management Card.



For more details on how a DHCP can configure the network settings for a Network Management Card, see “DHCP Configuration” in the *Online Guide*.

1. The Network Management Card sends out a DHCP request that uses the following to identify itself:
  - Vendor Class Identifier (by default, APC)
  - Client Identifier (by default, the MAC address of the Network Management Card)
  - User Class Identifier (by default, the identification of the application firmware installed on the Network Management Card)
2. A properly configured DHCP server responds with a DHCP offer that includes all of the settings that the Network Management Card needs for network communication. The DHCP offer also includes the Vendor Specific Information option (DHCP option 43). If configured to do so, the Network Management Card will ignore DHCP offers that do not encapsulate the APC cookie in DHCP option 43 using the following hexadecimal format:

Option 43 = 01 04 31 41 50 43

where

- The first byte (01) is the code
- The second byte (04) is the length
- The remaining bytes (31 41 50 43) are the APC cookie (not required by default)



See your DHCP server documentation to add code to the Vendor Specific Information option.

To change the command line interface (CLI) DHCP Cookie Is setting, use the Advanced option in the TCP/IP menu.



See *Local Access to the Command Line Interface (CLI)*, page 70 for more information.

## Remote Access to the Command Line Interface (CLI)

From any computer on the same network as the Network Management Card, you can use ARP and Ping to assign an IP address to the Network Management Card and then use Telnet to access the CLI of that Network Management Card and configure the other TCP/IP settings.

**NOTE:** After a Network Management Card has its IP address configured, you can use Telnet, without first using ARP and Ping, to access that Network Management Card.

1. Use the MAC address of the Network Management Card in the ARP command to define an IP address for the Network Management Card. For example, to define an IP address of 156.205.14.141 for a Network Management Card that has a MAC address of 00 c0 b7 63 9f 67, use one of the following commands:

**NOTE:** Look on the nameplate of the unit for the MAC address. The MAC address is also available on the display interface at **Main > About > Display > Device**.

- Windows command format:

```
arp -s 156.205.14.141 00-c0-b7-63-9f-67
```

- LINUX command format:

```
arp -s 156.205.14.141 00:c0:b7:63:9f:67
```

2. Use Ping with a size of 113 bytes to assign the IP address defined by the ARP command. For the IP address defined in step 1, use one of the following Ping commands:

- Windows command format:

```
ping 156.205.14.141 -l 113
```

- LINUX command format:

```
ping 156.205.14.141 -s 113
```

3. Use Telnet to access the Network Management Card at its newly assigned IP address. For example,

```
telnet 156.205.14.141
```

4. Use `apc` for both the user name and password.

5. Contact your network administrator to obtain the IP address, subnet mask, and default gateway for the Network Management Card.

6. Use these three commands to configure network settings (text in *italics* indicates a variable):

a. `tcpip -i yourIPAddress`

b. `tcpip -s yourSubnetMask`

c. `tcpip -g yourDefaultGateway`

For each variable, enter a numeric value with the format xxx.xxx.xxx.xxx.

For example, to set a system IP address of 156.205.14.141, enter the following command and press **ENTER**:

```
tcpip -i 156.205.14.141
```

7. Type `reboot`. The Network Management Card restarts to apply the changes.

## Local Access to the Command Line Interface (CLI)

You can use a computer connected to the serial port on the front of the display to access the CLI.

1. Select a serial port on the local computer and disable any service that uses that port.
2. Use the provided serial cable to connect the selected serial port to the serial on the front of the display.
3. Run a terminal program (such as HyperTerminal®, TeraTerm, or PuTTY) and configure the selected port for 9600 bps, 8 data bits, no parity, 1 stop bit, and no flow control.
4. Save the changes.
5. Press **ENTER**, repeatedly if necessary, to display the **User Name** prompt.
6. Use `apc` for the user name and password.
7. Contact your network administrator to obtain the IP address, subnet mask, and default gateway for the Network Management Card.
8. Use these three commands to configure network settings (text in *italics* indicates a variable):

a. `tcpip -i yourIPAddress`

b. `tcpip -s yourSubnetMask`

c. `tcpip -g yourDefaultGateway`

For each variable, enter a numeric value with the format xxx.xxx.xxx.xxx. For example, to set a system IP address of 156.205.14.141, enter the following command and press **ENTER**:

```
tcpip -i 156.205.14.141
```

9. Type `reboot`. The Network Management Card restarts to apply the changes.

# Access a Configured Unit

## Overview

After the unit is running on your network, you can access the configured cooling unit through the following interfaces:

- Web interface
- Telnet/SSH
- Simple Network Management Protocol (SNMP)
- FTP/SCP
- Modbus



For more information on the interfaces, see the *Online Guide*.

## Web Interface

Use Microsoft Internet Explorer® 7.x or higher (on Windows operating systems only), or Mozilla® Firefox® 3.0.6 or higher (on all operating systems) to access the cooling unit through its Web interface. Other commonly available browsers also may work but have not been fully tested by Schneider Electric.

You can use either of the following protocols when you use the Web browser to configure display interface options or to view the event log:

- The HTTP protocol (enabled by default), which provides authentication by user name and password but no encryption.
- The HTTPS protocol, which provides extra security through Secure Sockets Layer (SSL), encrypts user names, passwords, and data being transmitted, and authenticates the Network Management Card by means of digital certificates.

To access the Web interface and configure the security of your cooling unit on the network,

1. Enter the IP address or DNS name of the cooling unit into a Web browser.
2. Enter the user name and password (both are `apc` by default).
3. To enable or disable the HTTP or HTTPS protocols, use **Main > Configuration > Network**.



For more information on selecting and configuring network security, see the UPS Network Management Card Security Handbook, available on [www.schneider-electric.com](http://www.schneider-electric.com): search for “UPS Network Management Cards.”

## Telnet and SSH

You can access the control console through Telnet and/or Secure SHell (SSH), depending on which is enabled. To enable these access methods from the Web UI, select **Configuration > Network > Console > Access**. By default, Telnet is enabled. Telnet and SSH can be enabled simultaneously.

### Telnet for Basic Access

Telnet provides the basic security of authentication by user name and password, but not the high-security benefits of encryption. To use Telnet to access the Network Management Card control console from any computer on the same network,

1. At a command prompt, use the following command line, and press **ENTER**:

```
telnet address
```

As *address*, use the Network Management Card IP address or DNS name (if configured).

2. Enter the user name and password (by default, *apc* and *apc* for an Administrator, or *device* and *apc* for a Device User).

### SSH for High-Security Access

If you use the high security of SSL for the Web interface, use Secure SHell (SSH) for access to the CLI. SSH encrypts user names, passwords, and transmitted data.

The interface, user accounts, and user access rights are the same whether you access the CLI through SSH or Telnet, but to use SSH, you must first configure SSH and have an SSH client program installed on your computer.



See the *Online Guide* for more information on configuring and using SSH.

## Simple Network Management Protocol (SNMP)

### SNMPv1 Only

After you add the latest version of PowerNet® MIB to a standard SNMP MIB browser, you can use that browser to access the device. All user names, passwords, and community names for SNMP are transferred over the network as plain text. The default read community name is **public**; the default read/write community name is **private**.

### SNMPv3 Only

For SNMP GETs, SETs, and trap receivers, SNMPv3 uses a system of user profiles to identify users. An SNMPv3 user must have a user profile assigned in the MIB software program to perform GETs and SETs, browse the MIB, and receive traps. The default settings are **no authentication** and **no privacy**.

**NOTE:** To use SNMPv3, you must have an MIB program that supports SNMPv3, and SNMPv3 must be configured correctly in the Network Management Card.

The device supports SHA or MD5 authentication and V or DES encryption.

### SNMPv1 and SNMPv3

To use StruxureWare Data Center Expert to manage the device on the public network of StruxureWare system, you must have SNMPv1 enabled in the unit



interface. Read access allows devices to receive traps from the unit. Write access is required while you set the device as a trap receiver.

To enable or disable SNMP access, you must be an Administrator. Select **Administration > Network** and select the access option under SNMPv1 or SNMPv3.

## FTP/SCP

You can use FTP (enabled by default) or Secure CoPy (SCP) to transfer downloaded firmware to the Network Management Card or to access a copy of the device event or data logs. SCP provides the higher security of encrypted data transmission and is enabled automatically when you enable SSH. FTP and SCP can be enabled simultaneously.

To access the Network Management Card through FTP or SCP, the default user name and password are `apc` and `apc` for an Administrator, or `device` and `apc` for a Device User. In the command line, use the IP address of the unit.

**NOTE:** If you enable SSL and SSH for their high-security authentication and encryption, disable FTP. To disable FTP, you must be an Administrator. Go to **Main > Configuration > Network** to enable FTP.



In the *User Manual*, see the following sections:

- To transfer firmware, see “File Transfers.”
- To retrieve a copy of the event or data log, see “How to Use FTP or SCP to Retrieve Log Files.”

## Modbus

Modbus lets you view the Network Management Card through the interface of your building management system.

The Modbus RTU interface supports 2-wire RS-485, 4-wire RS-485, plus ground MODBUS TCP.

**NOTE:** Modbus can be configured to run at either 9600 or 19200 bps. It is already configured for 8 data bits, no parity, and 1 stop bit: parity is changeable but data bits and stop bits are not.



To access the Modbus Register Map, go to the Schneider Electric website, [www.schneider-electric.com](http://www.schneider-electric.com), and search for “Modbus Register Map.”

## Recover From a Lost Password

Use a local computer (a computer that connects to the Network Management Card through the serial port) to access the command line interface (CLI).

1. Select a serial port at the local computer, and disable any service that uses that port.
2. Connect the Schneider Electric serial cable (part number 940-0299) to the selected port on the computer and to the serial port on the front of the display.
3. Run a terminal program (such as HyperTerminal®) and configure the selected port:
  - 9600 bps
  - 8 data bits
  - No parity
  - 1 stop bit
  - No flow control
4. Press the **RESET** button on the front of the display, immediately press **ENTER** on the computer keyboard, repeatedly if necessary, to display the **User Name** prompt.

**NOTE:** If you do not press the **ENTER** key before five seconds elapse, you must press the **RESET** button.

If you are unable to display the **User Name** prompt, verify the following:

- The serial port is not in use by another application.
  - The terminal settings are correct as specified in step 3.
  - The correct cable is being used as specified in step 2.
5. Press the **RESET** button on the front of the display. The Status LED will alternately flash orange and green. Immediately press the **RESET** button on the front of the display a second time while the LED is flashing to temporarily reset the user name and password to their defaults.
  6. Press **ENTER** on the computer keyboard as many times as necessary to re-display the **User Name** prompt, then use the default, **apc**, for the user name and password. (If you take longer than 30 seconds to log on after the **User Name** prompt is re-displayed, you must repeat step 5 and log on again.)
  7. At the command line interface, use the following commands to change the password setting, which has been reset to **apc**:  

```
user -n <user name> -pw <user password>
```

For example, to change the Super User password to **XYZ**, type

```
user -n apc -pw XYZ
```
  8. Type **quit** or **exit** to log off, reconnect any serial cable you disconnected, and restart any service you disabled.

# Updating the Firmware


When you update the firmware on the unit, you obtain the latest features, performance improvements, and bug fixes.

Updating here means placing the module files on the unit; there is no installation required. Check regularly on [www.schneider-electric.com](http://www.schneider-electric.com) for any new updates.

**NOTE:** You will need to select the language pack if you require your display interface to be available in a language other than English.

## Update Display Firmware

### Display Interface

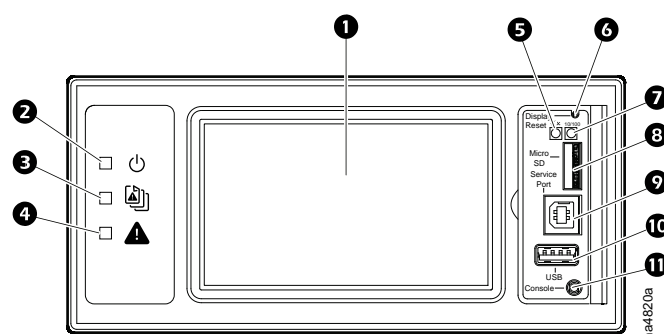

Item	Description	Function
1	LCD Display	4.3-inch touch-screen color display
2	Power LED	The cooling unit is powered when the LED is illuminated. Unit firmware is updating when LED is blinking.
3	Check Log LED	When this LED is illuminated, a new entry has been made to the event log.
4	Alarm LED	Displays current alarm condition of unit.
5	Status LED	Displays current network management card status.
6	Display Reset button	Resets the display microprocessor. This has no effect on the air conditioner controller.
7	Link-RX/TX (10/100) LED	Displays current network link status.
8	Micro SD card slot	Memory card expansion slot.
9	Service port	USB-B port used only by service personnel.
10	USB-A port	Supports firmware upgrades.
11	Serial Configuration port	Connects the display to a local computer to configure initial network settings or access the command line interface (CLI).

## Using a USB Drive to Transfer and Update Files

### Update Display Interface Firmware

1. Insert a USB drive into an available port on the PC and verify that the drive is formatted as a FAT32 file system.
2. Create a folder named **apcfirm** on the USB drive.
3. Acquire the firmware files from the local support team or the Schneider Electric Web site.
4. Unzip and extract the files to the **apcfirm** folder.

- Operating system (\*\_aos\_\*.bin)
- Boot monitor (\*\_bootmon\_\*.bin)
- Application (\*\_RD3xx\_\*.bin)

5. Use a text editor, like Notepad, to create a file named upload.rcf.
6. List the filename for each firmware module in the order to be transferred. An example is shown below.

**IMPORTANT:** The files must be listed in the correct order in the upload.rcf file.

- The BM (bootmon) file must be listed first: BM=apc\_hw06\_bootmon\_105.bin
- The AOS (operating system) file must be listed second: AOS=apc\_hw06\_aos\_609.bin
- The APP (application) must be listed third: APP=apc\_hw06\_rd3xx4i\_\*.bin

**NOTE:** \* in the APP file name is the revision number and will change with each release.

7. Save the upload.rcf file in the **apcfirm** folder.

Your **apcfirm** folder should look similar to the example folder shown here:

Name	Date modified	Type	Size
apc_hw06_aos_646.bin	3/16/2017 3:55 PM	BIN File	3,058 KB
apc_hw06_bootmon_108.bin	3/16/2017 3:55 PM	BIN File	256 KB
apc_hw06_unflrta_600g.bin	4/20/2017 4:41 PM	BIN File	2,454 KB
upload.rcf	3/17/2017 7:16 AM	RCF File	1 KB

8. Insert the USB drive into the USB-A port on the display interface.

A confirmation message appears on the display interface.

9. Press the **Display Reset** button to reset the display interface.

The display interface resets and transfers files. The display will resume operation when transfer is complete.


**NOTE:** The touch screen will be disabled during the transfer process. There is no disruption of unit operation during the file transfer process.

10. Remove the USB drive when the file transfer is complete.
11. Check the firmware version on the touch screen display interface on the **Main > About > Display** screen.
12. To update the firmware on additional units, repeat from step 8.

## Update Controller Firmware

Before starting the transfer, make sure the USB drive is formatted in FAT32.

**Path: Main > Configuration > Service > USB > Firmware Download**

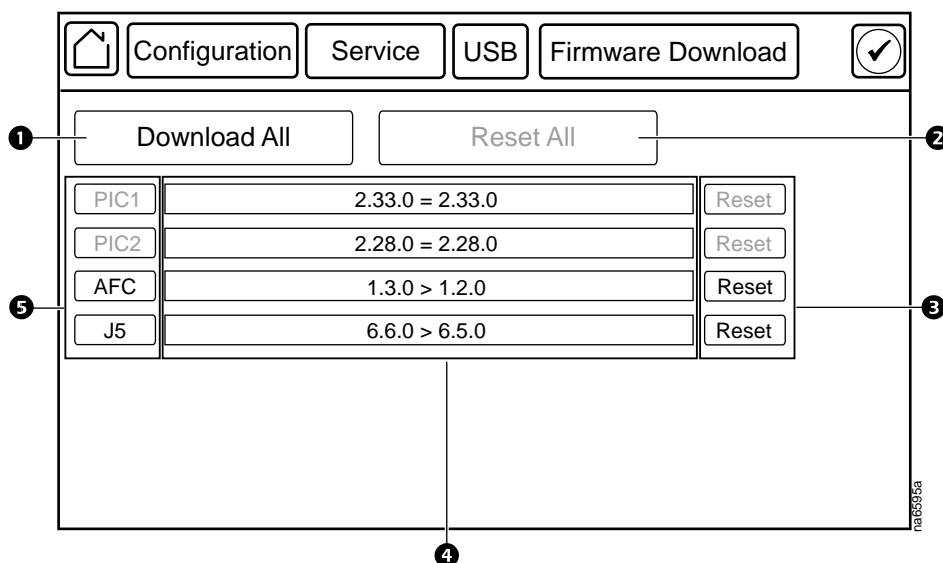

Item	Description	Function
1	Download All	Downloads all available firmware updates.
2	Reset All	Resets all controllers that have had firmware updates. This button will appear gray if no controllers need to be reset.
3	Reset	Resets the corresponding controllers individually. These buttons will appear gray if the controller cannot be reset or is not present.
4	Firmware revision	Displays the firmware revision on the USB drive on the left side of the operation symbol and the current firmware revision on the controller on the right side of the operation symbol.  <b>NOTE:</b> Make sure to check the revision numbers: the revision on the drive may not be a newer release.
	= symbol	An equals symbol denotes that the firmware revisions are the same.
	> symbol	A greater than symbol denotes that the current firmware can be changed to the firmware revision on the USB drive.
	Device Not Present	The controller is not present in the unit.
5	Controllers	Downloads the firmware for the specific controller. These buttons will appear gray if the controller firmware cannot be changed or the controller is not present.
	PIC1	PIC1
	PIC2	PIC2
	AFC	Active Flow Controller
	J5	Unit controller

1. Download the firmware upgrade files and unzip them.
2. Create a folder named **fw** on the USB flash drive.
3. Place the extracted module files in the **fw** directory.
4. Use a text editor to create a file named fw.rcf. (The file extension must be .rcf, not .txt for example.)
5. In fw.rcf, add a line for each firmware module that needs to be updated. The following are examples of formatting for the file.

**NOTE:** Make sure the j5.cbp file remains in directory: the J5 controller may download the firmware on its own if there is no valid firmware or the personality jumpers do not match the current loaded firmware.

PIC1 = pic1-2.33.0.cbp

PIC2 = pic2-2.28.0.cbp

AFC = AFC-1.11.0.cbp

J5 = J5-1.0.3.cbp

6. Place fw.rcf in the **fw** folder on the USB drive.
7. Insert the USB drive into the USB port on the display interface.
8. On the display interface, navigate to **Main > Configuration > Service > USB > Firmware Download**.
9. Select the firmware to download for the controllers individually or for all devices.
10. After downloading the firmware, reset the controllers individually or reset all.
11. Check that the update was completed successfully using the procedures in *Verify Updates*, page 78.

## Verify Updates

### Verify Success of the Transfer

To verify whether a firmware upgrade succeeded, you can use the xferStatus command in the command line interface to view the last transfer result. Alternatively, you can use an SNMP GET to receive the **mfiletransferStatusLastTransferResult** OID.

**NOTE:** This is only valid for checking the success of the touch screen firmware update.

### Last Transfer Result Codes

Possible transfer errors include the TFTP or FTP server not being found, or the server refusing access, the server not finding or not recognizing the transfer file, or a corrupt transfer file.

### Verify Version Numbers of Installed Firmware

Use the display interface or the Web user interface to verify the versions of the upgraded firmware modules. You can also use an SNMP GET to the MIB II sysDescr OID. In the command line interface, use the about command.

## Service Menu

### ⚠ WARNING

#### HAZARD TO EQUIPMENT OR PERSONNEL

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

The **Service** menus contain settings related to the operation of the unit that should only be changed by qualified personnel.

## Service Menu Access

The **Service** menus are only accessible to service personnel. If you need to access the **Service** menus, you will need to contact technical support with the code displayed in the message window. After receiving a service code from technical support, enter the code in the appropriate window on the display.

## Unit Configuration

**Path: Main > Configuration > Service > Unit**

**NOTE:** All changes to settings must be performed by qualified personnel.

- **Number of Evaporator Fan Power Supplies:** Set the number of fan power supplies installed in the electrical box. (1 or 2)
- **Evap Fan PS Calibration:** An evaporator fan power supply needs to be calibrated if a new fan power supply has been added to the unit or if a fan power supply has been replaced. Select **Start** and press **OK** to start calibration.
- **Evap Fan PS Calibration: In progress** is displayed if the fan power supply is being calibrated; **Finished** is displayed when calibration is complete.
- **Evap PS 1 Cal Factor:** This calibration factor is a reading from the power supply when it is off: a base number for zero amps. A normal reading is 2048  $\pm 10$ .
- **Evap PS 2 Cal Factor:** This calibration factor is a reading from the power supply when it is off: a base number for zero amps. A normal reading is 2048  $\pm 10$ .
- **Air Filter Type:** Select whether the air filters are **Standard** or **High Efficiency**.
- **Maximum Fan Speed:** Set the maximum fan speed percentage allowed for the evaporator fans. (15.0–100.0%)
- **Minimum Fan Speed:** Set the minimum fan speed percentage allowed for the evaporator fans. (15–100%)
- **Voltage:** Select the voltage of the unit.
  - **Not Configured**
  - **100-120v**
  - **200-240v**
- **Power Feed Type:** Select whether the power feed is a **Single** or **Dual** power feed.
- **Condensate Drain Type:** Select the type of condensate drain used by the unit. (**Gravity** or **Pump**)
- **Smoke-Fire Sensor:** Select **Yes** if the sensor is present.

- **Humidity Sensor Present:** Select **Yes** if the sensor is present.
- **Shutdown Input Present:** Select **Yes** if the shutdown input is present.
- **Shutdown Input State:** Displays the normal state of the shutdown input. (**Open** or **Closed**)
- **Number of Rack Inlet Temp Sensors in Unit:** Set the number of rack inlet air temperature sensors connected to the unit. (0–4)
- **Number of Leak Detectors in Unit:** Set the number of leak sensors connected to the unit. (0–4)
- **EEV Position:** The current position in percentage of the EEV.
- **EEV Opening at Startup:** Enter the starting position of the EEV for the compressor.

## Containment Systems

**Path: Main > Configuration > Service > Containment Systems**

- **Number of Active Flow Controllers:** Set the number of Active Flow Controller units in the group. (0–5)
- **Active Flow Control Lamp Test:** When set to **On**, the Active Flow Controller (s) LEDs will cycle through a red, green, and blue illumination pattern.
- **Active Flow Control Bias:** This setting is used to change the bias of the controller by adjusting the contained aisle pressure threshold. **Zero** is the default setting. Only qualified service personnel can make changes to these settings.
  - Hot Aisle Containment (HACS)
    - If the cooling units seem to be under-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for less cooling.
  - Cold Aisle Containment (CACS)
    - If the cooling units seem to be under-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for less cooling.

Setting	Blue LED—HACS Red LED—CACS	Setpoint Green LED	Red LED—HACS Blue LED—CACS
<b>Positive</b>	< -0.008 in. ±3%	0.004 ±0.0004 in.	> 0.016 in. ±3%
<b>Slightly Positive</b>	< -0.010 in. ±3%	0.002 ±0.0004 in.	> 0.014 in. ±3%
<b>Zero</b>	< -0.012 in. ±3%	0.000 ±0.0004 in.	> 0.012 in. ±3%
<b>Slightly Negative</b>	< -0.014 in. ±3%	-0.002 ±0.0004 in.	> 0.010 in. ±3%
<b>Negative</b>	< -0.016 in. ±3%	-0.004 ±0.0004 in.	> 0.008 in. ±3%



## Run Hours and Service Intervals

### Path: Main > Configuration > Service > Run Hours

Each component interval setting has an alarm. If set to **Enable**, the annunciator will sound when the service interval for the component has elapsed. The alarms are reset by selecting the check box for the **Reset XXX Service Alarm** for each component and pressing **OK**. Enable service interval alarms and set the number of weeks to service each component in the **XXX Alarm Interval** fields. The run hours counter for the service intervals can be reset or adjusted by qualified personnel after a component has been serviced. The following components can have service intervals configured:

**NOTE:** Service alarms for the unit and for the air filters are enabled by default. Other alarms must be enabled after startup.

- Unit
- Air Filter
- Compressor
- Condenser Fan
- Condensate Pump
- Fan 1
- Fan 2
- Fan 3
- Fan 4
- Fan 5
- Fan 6
- Fan 7
- Fan 8

## Compressor Settings

### Path: Main > Configuration > Service > Compressor Drive

- **Compressor Speed:** Displays the current speed of the compressor. (Hz)
- **Maximum Compressor Speed:** Enter the maximum speed allowed for the compressor. (60.0–100.0 Hz)
- **Minimum Compressor Speed:** Enter the minimum speed allowed for the compressor. (15.0–60.0 Hz)
- **Startup Compressor Speed:** Enter the target speed of the compressor (Hz) when it is first turned on. The target speed is valid until the evaporating temperature exceeds 0°C (32°F). After that, the compressor is controlled by the supply temperature PID. (15–100 Hz)
- **Maximum Compressor Restarts:** Enter how many compressor restarts are allowed within 30 minutes after a compressor trips. The variable frequency drive (VFD) will shut down the compressor if the number of restarts exceeds this value within 30 minutes. (1–20)
- **Enable Envelope Management:** Select whether or not envelope management is enabled.



See *Envelope Management*, page 42.

- **Compressor Envelope Start Offset:** The environmental action offset. This is the temperature offset at which the controller will start applying the compressor envelope management process. (2.8–5.6°C (6.2–12.3°F))

- **Heat Sink Temperature:** Displays the compressor heat sink temperature. (°C (°F))
- **Current:** Displays the compressor current draw. (A)
- **Compressor Power:** The compressor power consumption. (kW)
- **Alarm Status:** The compressor alarm word used for diagnostics.
- **Warning Status:** The compressor warning word used for diagnostics.
- **Software Version:** The software version of the compressor controller.
- **Serial Number:** The serial number of the compressor
- **Software ID:** The compressor driver software ID.

## Oil Return Management

**Path: Main > Configuration > Service > Oil Return Management**

**NOTE:** All changes to settings must be performed by qualified personnel.

- **Oil Return Management:** Select **Yes** to enable oil return management. This increases the velocity for short periods (**Boost Duration**) when the velocity is too low (**Low Speed Limit**) to ensure sufficient quantities of oil in the compressor crankcase.
- **Boost Duration:** The length of time for which the compressor speed will be increased to the **Boost Speed**. (60–300 s)
- **Boost Speed:** The speed to which the compressor will be boosted during the **Boost Duration**. (80–200 Hz)
- **Low Speed Running Time:** When oil return management is enabled and the compressor speed is less than the **Low Speed Limit** for this entered length of time, the VFD boosts the compressor speed to the **Boost Speed** for the length of time entered in **Boost Duration**. (1–1400 minutes)
- **Low Speed Limit:** The compressor speed at which **Oil Return Management** will be activated. (80–200 Hz)

## PID Settings

### NOTICE

#### DAMAGE TO EQUIPMENT

This procedure is to be performed by Schneider Electric qualified personnel only. Improperly set PID controls could result in equipment damage.

**Failure to follow these instructions can result in equipment damage.**

#### Path: Main > Configuration > Service > PIDs

The Proportional plus Integral plus Derivative (PID) loops control the output of the fans and other components.


- **Superheat Control:** Displays whether the PID algorithm for superheat is running (**Run**) or not (**Stop**).
- **Superheat Setpoint:** Set the target value for the temperature difference for refrigerant entering and leaving the coil. (4.4–22.2Δ°C (8.0–40.0Δ°F))
- **Superheat PID Gain:** The proportional multiplier (gain) for the temperature sensors installed on the inlet and outlet of the cooling coil. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.
- **Superheat PID Integral:** The integral multiplier (reset rate) for the temperature sensors installed on the inlet and outlet of the cooling coil. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.
- **Superheat PID Derivative:** The derivative multiplier (derivative) for the temperature sensors installed on the inlet and outlet of the cooling coil. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.
- **Superheat PID Reset:** Select **Yes** to reset the superheat setpoint PID values to factory default settings.
- **AirFlow Control:** Displays whether the PID algorithm for airflow control is running (**Run**) or not (**Stop**).
- **Active Flow Control Bias:** This setting is used to change the bias of the controller by adjusting the contained aisle pressure threshold. **Zero** is the default setting. Only qualified service personnel can make changes to these settings.
  - Hot Aisle Containment (HACS)
    - If the cooling units seem to be under-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for less cooling.
  - Cold Aisle Containment (CACS)
    - If the cooling units seem to be under-cooling, select **Positive** or **Slightly Positive** to adjust the aisle pressure for additional cooling.
    - If the cooling units seem to be over-cooling, select **Negative** or **Slightly Negative** to adjust the aisle pressure for less cooling.

Setting	Blue LED—HACS Red LED—CACS	Setpoint Green LED	Red LED—HACS Blue LED—CACS
<b>Positive</b>	< -0.008 in. ±3%	0.004 ±0.0004 in.	> 0.016 in. ±3%
<b>Slightly Positive</b>	< -0.010 in. ±3%	0.002 ±0.0004 in.	> 0.014 in. ±3%
<b>Zero</b>	< -0.012 in. ±3%	0.000 ±0.0004 in.	> 0.012 in. ±3%

Setting	Blue LED—HACS Red LED—CACS	Setpoint Green LED	Red LED—HACS Blue LED—CACS
<b>Slightly Negative</b>	< -0.014 in. $\pm$ 3%	-0.002 $\pm$ 0.0004 in.	> 0.010 in. $\pm$ 3%
<b>Negative</b>	< -0.016 in. $\pm$ 3%	-0.004 $\pm$ 0.0004 in.	> 0.008 in. $\pm$ 3%

- **AirFlow PID Gain:** The proportional multiplier (gain) for the evaporator fan when an AFC is present. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.
- **AirFlow PID Integral:** The integral multiplier (reset rate) for the evaporator fan when an AFC is present. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.
- **AirFlow PID Derivative:** The derivative multiplier (derivative) for the evaporator fan when an AFC is present. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.
- **AirFlow PID Reset:** Select **Yes** to reset the airflow control PID values to factory default settings.
- **Condenser Fan Control:** Displays whether the PID algorithm for the condenser fan is running (**Run**) or not (**Stop**).
- **Condenser Temperature Setpoint:** Enter the setpoint that will be used by the condenser temperature controller in two conditions: One condition is when the evaporating temperature is less than or equal to 0°C (32°F); the other condition is when the condensing temperature sensor does not provide a value. (10.0–93.3°C (50.0–200.0°F))
- **Condenser Temperature Setpoint Mode:** If **Manual** is selected, the condenser fan is controlled to regulate the condensing temperature to the **Condenser Temperature Setpoint**. If **Auto** is selected, the condenser fan is controlled to regulate the condensing temperature to a setpoint determined by the evaporating temperature, as show in the diagram below.

#### COMPRESSOR ENVELOPE (HIGH CONDENSING TEMPERATURE)

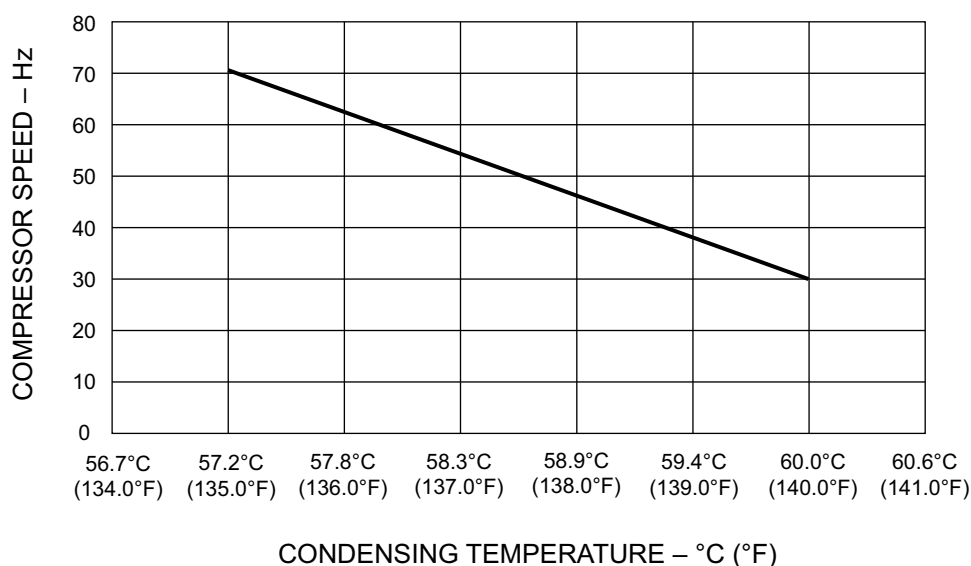

- **Condenser PID Gain:** The proportional multiplier (gain) for the condenser fan. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.
- **Condenser PID Integral:** The integral multiplier (reset rate) for the condenser fan. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.

- **Condenser PID Derivative:** The derivative multiplier (derivative) for the condenser fan. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.
- **Condenser PID Reset:** Select **Yes** to reset the condenser fan control PID values to factory default settings.
- **Supply Air Control:** Displays whether the PID algorithm for the supply air is running (**Run**) or not (**Stop**).
- **Supply Air Setpoint:** The required temperature of the air expelled into the surrounding environment. (15.0–30.2°C (59.0–86.4°F))
- **Delta-T Setpoint:** When the group is programmed for HACS or RACS mode, this value specifies the desired temperature difference between the supply and return air temperatures when an AFC is not present. (**10F/5.6C, 15F/8.3C, 20F/11.1C, 25F/13.9C, 30F/16.7C, 35F/19.4C, 40F/22.2C**)

**NOTE:** Set a lower **Cool Setpoint** or a smaller **Delta-T Setpoint** to assist with start-up during winter.

- **Supply Air PID Gain:** The proportional multiplier (gain) for the supply air sensors installed on the unit. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.
- **Supply Air PID Integral:** The integral multiplier (reset rate) for the supply air temperature sensors installed on the unit. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.
- **Supply Air PID Derivative:** The derivative multiplier (derivative) for the supply air temperature sensors installed on the unit. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.
- **Supply Air PID Reset:** Select **Yes** to reset the supply air temperature PID values to factory default settings.
- **Rack Inlet Control:** Displays whether or not the PID algorithm for the rack inlet air temperature is running (**Run**) or not (**Stop**).
- **Cool Setpoint:** Set the temperature that the cooling group should maintain in the IT space. (17.8–35.0°C (64.0–95.0°F))
- **Rack Inlet PID Gain:** The proportional multiplier (gain) for the rack inlet air temperature sensors connected to the unit. The proportional multiplier adjusts for the difference (error) between the measured value and the setpoint.
- **Rack Inlet PID Integral:** The integral multiplier (reset rate) for the rack inlet air temperature sensors connected to the unit. The integral multiplier adjusts for error measurement and the amount of time that the error has existed. The integral multiplier adds to or subtracts from the output in small increments to correct for the offset error caused by the proportional contribution.
- **Rack Inlet PID Derivative:** The derivative multiplier (derivative) for the rack inlet air temperature sensors connected to the unit. The derivative multiplier adjusts the output for rapid changes in the error, correcting for the rate of change of the error over time.
- **Rack Inlet PID Reset:** Select **Yes** to reset the rack inlet air temperature PID values to factory default settings.

## Tune the PID Loop

Tune the PID loop to optimize the performance of the cooling group.

**NOTE:** This procedure is to be performed by Schneider Electric qualified personnel only. The PID loop must be tuned after the equipment in the room is installed and running. The loop should be tuned periodically to account for changes in the room load.

1. Adjust the integral and derivative constants to zero and the proportional constant to 1.0.
2. Set the temperature setpoint value and start the cooling group.

3. When the temperature reaches a stable value, increase the proportional constant by 0.5. If the temperature does not respond to this change, adjust the setpoint.
4. Repeat step 3 until the temperature value starts to oscillate and the peak amplitude of the oscillations is constant.
5. Note the time, in minutes, between the peaks of the oscillations. This is the Ultimate Period,  $P_U$ .
6. Note the value of the proportional constant. This is the Ultimate Gain,  $G_U$ .
7. Compute the PID constants using the table below. Use the equations for that control method in the row to compute the values for each constant.
8. Set each constant according to these calculations.

Control Method	Proportional	Integral	Derivative
P	$0.5 * G_U$	—	—
P+I	$0.45 * G_U$	$0.54 * G_U / P_U$	—
P+I+D	$0.6 * G_U$	$1.2 * G_U / P_U$	$0.075 * G_U * P_U$

You may need to further tune the PID loop in the following ways to account for changes in the room load.

Loop Behavior	PID Tuning Correction
Slow response to temperature changes	Increase the proportional multiplier or increase the derivative multiplier.
Overcooling/undercooling after changes in the room load or changes in setpoint	Increase the derivative or the proportional multiplier.
Environmental temperature never reaches the setpoint	Increase the integral multiplier.
Overcooling/undercooling on constant room load	Decrease the integral multiplier.

# Maintenance

## Maintenance Mode

### NOTICE

#### UNIT MALFUNCTIONS

- Changing the settings incorrectly can cause malfunctions to your cooling unit.
- Only qualified service personnel should make changes to these settings.

**Failure to follow these instructions can result in equipment damage.**

#### Path: Main > Configuration > Service > Maintenance Mode

Maintenance mode is used to perform maintenance checks. Qualified personnel can manually control components within the unit to check for errors and mechanical issues. The unit must be in an **Off** state before being put in maintenance mode. Press **OK** next to each setting to accept changes. Some data items are duplicated on multiple screens to provide the status of components while adjusting settings.

- **Maintenance Mode:** Select which type of maintenance mode to enter.
  - **Enable\_Indefinitely:** The unit will remain in maintenance mode until it is disabled.
  - **Enable\_With\_Timeout:** The unit will remain in maintenance mode for two minutes.
  - **Disable:** The unit will exit maintenance mode and resume normal operation.
- **Maximum Cooling:** Select **Max** to set all of the maintenance mode actuator settings to the maximum output: condenser fan, evaporator fan, EEV position, and compressor speed.
- **EEV Position:** The current open percentage of the electronic expansion valve. (%)
- **Suction Pressure:** The pressure of the refrigerant at the suction line. (bar (psi))
- **Discharge Pressure:** The pressure of the refrigerant at the discharge line. (bar (psi))
- **Compressor Speed:** Enter a speed to which the compressor will be manually commanded. (0.0–100.0 Hz)
- **Avg. Fan Speed:** The current average speed of the eight fans in the indoor unit. (rpm)
- **Fan Speed:** The current speed of the evaporative fans. (%)
- **Fan Speed:** Enter a fan speed percentage to manually control the evaporator fans. (0.0–100.0 %)
- **Condenser Fan Speed:** The current speed of the condenser fan. (rpm)
- **Condenser Fan Speed:** The current speed of the condenser fan. (%)
- **Condenser Fan Speed:** Enter a fan speed percentage to manually control the fan of the condensing unit. (0.0–100.0%)
- **EEV Position:** The current open percentage of the electronic expansion valve. (%)
- **EEV Position:** Enter an open percentage for the electronic expansion valve. When the compressor speed is greater than 0 Hz, the EEV is controlled by the superheat PID controller. (0.0–100.0%)
- **Liquid Line Solenoid:** The current state of the liquid line solenoid valve: **Open** or **Closed**.

- **Liquid Line Solenoid:** Select to open or close the liquid line solenoid valve. When the compressor speed is set greater than 0 Hz, the liquid line is forced open. (**Open** or **Closed**)
- **Alarm Relay 1:** Select open or closed to control the alarm relays. (**Open** or **Closed**)
- **Alarm Relay 2:** Select open or closed to control the alarm relays. (**Open** or **Closed**)
- **Alarm Relay 3:** Select open or closed to control the alarm relays. (**Open** or **Closed**)
- **Alarm Relay 4:** Select open or closed to control the alarm relays. (**Open** or **Closed**)
- **Outlet Evap Coil Temperature:** The temperature of the refrigerant leaving the evaporative coil. (°C (°F))
- **Inlet Evap Coil Temperature:** The temperature of the refrigerant entering the evaporative coil. (°C (°F))
- **Upper Supply Temperature:** The temperature from the top supply air temperature sensor connected to this unit. (°C (°F))
- **Lower Supply Temperature:** The temperature from the bottom supply air temperature sensor connected to this unit. (°C (°F))
- **Upper Return Temperature:** The temperature from the top return air temperature sensor connected to this unit. (°C (°F))
- **Lower Return Temperature:** The temperature from the bottom return air temperature sensor connected to this unit. (°C (°F))
- **Suction Pressure:** The pressure of the refrigerant at the suction line. (bar (psi))
- **Discharge Pressure:** The pressure of the refrigerant at the discharge line. (bar (psi))
- **EEV Position:** The current open percentage of the electronic expansion valve. (%)
- **Liquid Line Solenoid:** The current state of the liquid line solenoid valve: **Open** or **Closed**.
- **Fan Speed:** The current speed of the evaporative fans. (%)
- **Condenser Fan Speed:** The current speed of the condenser fan. (%)



## Monthly Preventive Maintenance

Photocopy the following pages and use them during the maintenance procedures. After they have been completed, save them for future reference.

Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

Perform the following monthly maintenance check lists.

### Environment

☐ Supply air temperature sensor reading: \_\_\_\_\_

☐ Return air temperature sensor reading: \_\_\_\_\_

☐ Record the alarm history for the last month.

---

---

---

---

---

---

---

---

---

---

### Cleanliness

☐ Check the condition of the air filters. Clean or change if necessary.

☐ Check the condition of the condenser coil. Remove large debris.

## Mechanical

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- |                          |  |
|--------------------------|--|
| <input type="checkbox"/> | Check the evaporator fans for abnormal noise or vibration. |
| <input type="checkbox"/> | Check the liquid line sight glass moisture indicator.      |
| <input type="checkbox"/> | Check the liquid line sight glass for bubbles.             |
| <input type="checkbox"/> | Check the oil level in the compressor sight glass.         |
| <input type="checkbox"/> | Check the condenser fans for abnormal noise or vibration.  |

## Electrical

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- ☐ Inspect the electrical panel doors and covers for damage or loose hardware.
- ☐ Check the condenser electrical panel and covers for damage or loose hardware.

## Functional Tests

- ☐ Check the operation of the display interface.

## Quarterly Preventive Maintenance

Photocopy the following pages and use them during the maintenance procedures. After they have been completed, save them for future reference.

Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

Perform the following quarterly maintenance check lists in addition to the monthly check lists.

### Environment

☐ Record the **Supply Air Setpoint**: \_\_\_\_\_

☐ Record the **Cool Setpoint**: \_\_\_\_\_

### Cleanliness

☐ Check for debris in the condensate pan. Clean as needed.

### Mechanical

#### **DANGER**

##### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

#### **WARNING**

##### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

☐ Record the suction and discharge pressures: \_\_\_\_\_

☐ Record the evaporator superheat temperature: \_\_\_\_\_

## Electrical

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- ☐ Check wiring harnesses and molded connectors.
- ☐ Check customer interface wiring connections.
- ☐ Check temperature and humidity sensor connections.

## Semi-Annual Preventive Maintenance

Photocopy the following pages and use them during the maintenance procedures. After they have been completed, save them for future reference.

Prepared By: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date: \_\_\_\_\_

Perform the following quarterly maintenance check lists in addition to the monthly and quarterly check lists.

### Environment



Check for visible damage to the cooling unit.



Check for dirt, dust, debris, and liquid stains in and around the cooling unit.

### Cleanliness



Check for debris in the condensate pan. Clean as needed.



Check and clean the evaporator coil.



Check and clean the condenser coil.

## Mechanical

### **DANGER**

#### **HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH**

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### **WARNING**

#### **HAZARD TO EQUIPMENT OR PERSONNEL**

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- ☐ Check for refrigerant leaks on valves, threaded connections, and heat exchangers.
- ☐ Check refrigerant piping clamps and insulation. Secure as needed.
- ☐ Check that the condensate line is not obstructed or clogged.

## Electrical

### DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- This equipment must be installed and serviced by qualified personnel only.
- Turn off all power supplying this equipment before working on or inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.

**Failure to follow these instructions will result in death or serious injury.**

### WARNING

#### HAZARD TO EQUIPMENT OR PERSONNEL

All work must be performed by Schneider Electric qualified personnel.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

- ☐ Check circuit breaker and fuse block electrical connections.
- ☐ Check low voltage transformers, measure and record output voltage.
- ☐ Measure and record mains input voltage: \_\_\_\_\_
- ☐ Check and tighten electrical connections on the compressor inverter drive.
- ☐ Check and record the current draw for the following components:
  - Fans: \_\_\_\_\_
  - Compressor: \_\_\_\_\_
- ☐ Check condenser electrical components, fuses, contactors, speed controller.

## Functional Tests

- ☐ Check the operation of the water leak detection device.
- ☐ Verify the cooling operation mode is functioning properly.
- ☐ Check condensate pump operation.



# Troubleshooting

If necessary, call Technical Support describing the nature of the fault and its possible cause displayed on the control panel.

Problem	Possible Cause	Corrective Action
Controls erratic or inoperative	Inlet temperature to cooling unit is higher than rated maximum temperature	Reduce the load or add additional cooling equipment.
Fans fail to start	Cooling unit shutdown due to an external command	Temporarily remove the input contact cable, if it is connected.
	Single fan fails to start	Verify that the fan circuit breaker is ON.
Cooling unit cannot obtain setpoint	Improper placement of remote temperature sensor	Verify that the remote temperature sensor is properly located in the cold aisle.
	Dirty filter	Clean the filter.
	Dirty coil	Clean the coil.
	Application error	Contact Schneider Electric technical support
	Heat load is too far away	Place the cooling unit closer to the heat load.
Water carryover	Improper fan speed selected	RACS and HACS modes only: Select the next-highest fan speed setting.
	Room humidity is too high	Improve room sealing.
Temperature control not tight enough	Improper placement of remote temperature sensor	Verify that the remote temperature sensor is properly located in the cold aisle.
Water on outside of cooling unit	Condensate drain hose is not connected or not properly routed outside the cooling unit	Verify that the condensate drain hose is properly connected to the pump and properly routed outside of the cooling unit.  Verify that the condensate drain line does not exceed 3.5 m (11.5 ft) lift and 18.0 m (60.0 ft) horizontal run.
	Leak in drain system	Locate and repair the leak.
	Cooling unit not leveled properly	Adjust the leveling feet of the cooling unit.
	Damaged piping insulation	Identify damaged area and repair the insulation.
Display interface not operational, but cooling unit operates	Display interface not connected properly	Verify that the display interface cable is connected properly.
Incorrect air pressure	False filter clogs	Verify that the ends of the clear plastic air tubes are not obstructed.  Verify that the clear plastic air tubes are connected to the controller.  Verify that the clear plastic air tubes are not pinched.
Alarms do not show up on monitoring equipment (Customer Output Contact)	External monitoring equipment is not receiving power or is not functioning properly	Confirm that power, if required, is being supplied to the external equipment.  If the cooling unit (+12 V or +24 V) is providing power to the external equipment, verify that the external equipment is $\leq 50$ mA.  Test the external equipment by bypassing the customer output contact.  Verify Customer Output Contact settings.

Problem	Possible Cause	Corrective Action
Cooling unit does not shut down on command	Drive voltage	<p>Verify that there is a drive voltage entering the input of the cooling unit. You may use the available +12 V or +24 V. You must also use the ground.</p> <p>Verify Customer Input Contact settings.</p>
No communication with building management system (BMS) port	Improper connection	<p>Confirm that the cooling unit is connected to the BMS port and not to the Control port.</p> <p>Make sure that the wire polarity is correct. Using a DC voltmeter, test the signal with no transmissions in progress. Expect the voltage at pin 2 to be greater than at pin 1 by at least 200 mV. Measure the cooling unit with the cable disconnected, and then measure it again with the cable connected. If the signal is less than 200 mV, the cooling unit may be reverse-wired.</p> <p>Make sure that every cooling unit has either two sets of wires in its connector or one set of wires and a terminating resistor of 100 to 120 ohms.</p>
Cooling units are not communicating with each other	A-Link failure	<p>Verify that the first and last cooling units have one cable and a terminator.</p> <p>Verify that every other cooling unit has two cables.</p> <p>Confirm that the A-Link cables are connected to the ALink ports and that a network cable is connected to the network port.</p> <p>Verify that the number of cooling units in the cooling group matches the group number setting.</p>
Output air is 17°C (62°F) and fans are running at a very high rate of speed.	Upper or lower supply air sensor	<p>Either upper or lower supply air temperature sensor has a fault. Verify that both supply air temperature sensors are installed and working properly.</p>

# Worldwide Customer Support

Customer support for this or any other product is available at no charge in any of the following ways:

- Visit the Schneider Electric Web site to access documents in the Schneider Electric Knowledge Base and to submit customer support requests.

- **[www.schneider-electric.com](http://www.schneider-electric.com)** (Corporate Headquarters)

Connect to localized Schneider Electric Web sites for specific countries, each of which provides customer support information.

- **[www.schneider-electric.com/support/](http://www.schneider-electric.com/support/)**

Global support searching Schneider Electric Knowledge Base and using esupport.

- Contact the Schneider Electric Customer Support Center by telephone or e-mail.

Local, country-specific centers: go to [www.schneider-electric.com/support/contact](http://www.schneider-electric.com/support/contact)**[www.schneider-electric.com](http://www.schneider-electric.com) > Support > Operations around the world** for contact information.

For information on how to obtain local customer support, contact the representative or other distributors from whom you purchased your product.

Schneider Electric  
35 rue Joseph Monier  
92500 Rueil Malmaison  
France

+ 33 (0) 1 41 29 70 00

[www.schneider-electric.com](http://www.schneider-electric.com)

As standards, specifications, and design change from time to time,  
please ask for confirmation of the information given in this publication.

© 2018 – 2019 Schneider Electric. All rights reserved.

990-91192B-001